



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 1	RECTIFIER ASSEMBLY	1		
2	11	45076	NUT, RECTIFIER TERMINAL	3		
3	10	20411	SCREW, RECTIFIER TO SWITCH	2		
4	50	73521	STARTER MOTOR ASSEMBLY	1		
5		57247	STOP, RUBBER-STARTER MOTC	1		
6		56703	COLLAR, RUBBER-STARTER MO	2		
7	23	56774	SPACER, COLLAR TO BRACKET	AR		3
8	84	66053A 1	WIRE ASSEMBLY	1	STARTER MOTOR TO SOLENOI	
9	11	64015	NUT, WIRE TO STARTER MOTOI	1		
10	84	66008A 2	WIRE ASSEMBLY	1	STARTER MOTOR TO BRACKET	
11	10	29197	SCREW, WIRE TO STARTER MO	1		
12	89	68258	STARTER SOLENOID	1		
13	13	26996	LOCKWASHER, SOLENOID TERN	2		
14	11	45076	NUT, SOLENOID TERMINAL (#10	2		
15	13	26993	LOCKWASHER, SOLENOID TERN	2		
16	11	21908	NUT, SOLENOID TERMINAL (5/11	2		
17		46265	BOOT, TERMINAL-STARTER SOL	1		
18	10	20031	SCREW, SELENOID TO SUPPOR	2		
19	13	26992	WASHER, STARTER SOLENOID	2		
20	84	73447	WIRING HARNESS (INTERNAL)	1		
21	24	28975	SPRING, GARTER-INTERNAL WI	1		
22	54	76368	CLAMP, WIRING HARNESS	1		
23	10	45862	SCREW	2	WIRING HARNESS CLAMP TO E	
24	13	26996	LOCKWASHER, WIRING HARNE	2		
25	12	20128	WASHER, WIRING HARNESS CL	2		
26		61990	STA-STRAP, WIRING HARNESS	1		