



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	6038A 5	GEAR HOUSING ASSY, COMP. (S	1	UNITED STATES 4357640 THRL	
-	1643	6038A 7	GEAR HOUSING ASSY, COMP. (L	1	UNITED STATES 4357640 THRL	
-	1643	6038A17	GEAR HOUSING ASSY, COMP. (S	1	UNITED STATES 4576237 AND I	
-	1643	6038A18	GEAR HOUSING ASSY, COMP. (L	1	UNITED STATES 4576237 AND I	
1	1643	6038A 6	GEAR HOUSING ASSEMBLY	1	(SEE "GEAR HOUSING ASSEMB	
50		69792	CAM, SHIFT	1	UNITED STATES 4357640 THRL	
50		54346	CAM, SHIFT	1	UNITED STATES 4576237 AND I	
51		38441	FOLLOWER, CAM	1		
52		20843	SLIDE, CROSS PIN	1		
53	24	39845	SPRING, COMPRESSION - CAM	1		
54	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR		3
55	31	38356A 1	TAPERED ROLLER BEARING A	1		
56	31	21739	BEARING, ROLLER - FORWARD	1		
57	43	55608	FORWARD GEAR	1		
58	52	47586	RATCHET, SLIDING CLUTCH	1		
59	17	38113	PIN, CROSS - RATCHET TO PR	1		
60	24	38114	SPRING, RETAINING - CROSS F	1		
61	44	55911	SHAFT, PROPELLER	1	UNITED STATES 4357640 THRL	
61	44	75365	SHAFT PROPELLER	1	UNITED STATES 4576237 AND I	
62	43	66554	REVERSE GEAR	1		
63	15	20927A 1	SHIM, THRUST WASHER TO GE	AR		3
64	12	32004	WASHER, THRUST - REVERSE	1		
65	30	20839	BEARING, BALL - REVERSE GE	1		
66	25	31986	"O RING, BEARING CARRIER	1		1
67		69386A 1	BEARING CARRIER ASSEMBLY	1		
68	31	21700	BEARING, ROLLER - BEARIN	1		
69	26	69188	OIL SEAL, BEARING CARRIER	1		
70	26	69189	OIL SEAL, LINE CUTTER	1		
71	28	30281	KEY, LOCATING - BEARING CAF	1		
72	14	53012	TAB WASHER, GEAR HOUSING	1		
73		53013	COVER, GEAR HOUSING	1		
74		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
75	10	66024	SCREW, TRIM TAB TO GEAR H	1		
76	12	45175	WASHER, DRIVE SHAFT HOUS	1		
77	11	34863	NUT	1	DRIVE SHAFT HOUSING TO GE,	
78	12	65791	WASHER, DRIVE SHAFT HOUS	1		
79	11	34933	NUT	1	DRIVE SHAFT HOUSING TO GE,	
80		65758	THRUST HUB, FRONT	1	UNITED STATES 4357640 THRL	
81		62124A 1	THRUST HUB ASSEMBLY, REAR	1		
82	12	31992	WASHER, CUPPED - THRUST H	1		
80		7224E	THRUST HUB, FRONT	1	UNITED STATES 4576237 AND I	