



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	6459A10	GEAR HOUSING ASSY, COMP. (S	1	UNITED STATES 4962056 THRL	
-	1643	6459A11	GEAR HOUSING ASSY, COMP. (L	1	UNITED STATES 4962056 THRL	
-	1643	7406A14	GEAR HOUSING ASSY, COMP. (S	1	UNITED STATES 5193259 AND I	
-	1643	7406A15	GEAR HOUSING ASSY, COMP. (L	1	UNITED STATES 5193259 AND I	
1	1643	6459A 3	GEAR HOUSING ASSY - - SEE	1	UNITED STATES 4962056 THRL	
1	1643	7406A16	GEAR HOUSING ASSY	1	UNITED STATES 5193259 AND I	
51		54346	CAM, SHIFT	1	UNITED STATES 4962056 THRL	
51		76039	CAM, SHIFT	1	UNITED STATES 5193259 AND I	
52		38441	FOLLOWER, CAM	1		
53		20843	SLIDE, CROSS PIN	1		
54	24	39845	SPRING, COMPRESSION - CAM	1		
55	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR		3
56	31	38356A 1	TAPERED ROLLER BEARING A	1		
57	31	21739	BEARINH, ROLLER - FORWARD	1		
58	43	55608	FORWARD GEAR ASSEMBLY	1		
59	52	47586	RATCHET, SLIDING CLUTCH	1		
60	17	38113	PIN, CROSS - RATCHET TO PR	1		
61	24	38114	SPRING, RETAINING - CROSS F	1		
62	44	75365	SHAFT, PROPELLER	1		
63	43	79158A 1	REVERSE GEAR ASSEMBLY	1		
65	12	32004	WASHER, THRUST - REVERSE	1		
66	30	20839	BEARING, BALL - REVERSE GE	1		
67	25	31986	"O" RING, BEARING CARRIER	1		1,2
68		69386A 1	BEARING CARRIER ASSEMBLY	1		
69	31	21700	BEARING, ROLLER - BEARIN	1		
70	26	69188	OIL SEAL, BEARING CARRIEF	1		
71	26	69189	OIL SEAL, BEARING CARRIEF	1		
72	28	30281	KEY, LOCATING - BEARING CAF	1		
73	14	53012	TAB WASHER, GEAR HOUSING	1		
74		53013	COVER, GEAR HOUSING	1		
75		31640A 1	TRIM TAB ASSEMBLY, GEAR HO	1		
76	10	66024	SCREW, TRIM TAB TO GEAR H	1		
77	12	45175	WASHER, DRIVE SHAFT HOUSIN	1		
78	11	34863	NUT, DRIVE SHAFT HOUSING S	1		
79	12	65791	WASHER	1	DRIVE SHAFT HOUSING TO GE,	
80	11	34933	NUT	1	DRIVE SHAFT HOUSING TO GE,	
81		73345	THRUST HUB, FRONT	1		
84	14	76281	TAB WASHER, PROPELLER	1		
85	11	69578	NUT, PROPELLER	1		
-	27	72486A78	GASKET SET			
-	27	72486A79	GASKET SET			