



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	11	20166	NUT, SHEAVE SHAFT (LEFT HAM	1			
2	14	61004	TAB WASHER, SHEAVE SHAFT N	1			
3		77329	HOUSING, STARTER	1			
4	10	32565	SCREW	3	STARTER HOUSING TO CRANK		
5	13	20202	LOCKWASHER, STARTER HOUS	3			
6		37691	PLATE, CABLE GUIDE	1			
7	10	35881	SCREW, DRIVE - CABLE GUIDE	3			
8		61002	RETAINER, STARTER SPRING	1			
9	24	39502A	SPRING, STARTER REWIND	1			
10		76053A	SHEAVE ASSEMBLY	1			
11	23	63100	BUSHING, SPRING GUIDE	1			
12		30596	PAWL, STARTER	3			
13	13	36206	WASHER, WAVE-STARTER PAW	3			
15	23	63061	SPACER, SHEAVE SHAFT	1			
16		39840	RETAINER, WAVE WASHER	1			
17	12	57837	WASHER, WAVE WASHER RETA	1			
18	13	20160	WASHER, WAVE-RETAINER TEN	1			
19	24	66853	SPRING, RETAINER PLATE TO S	1			
19A		66848	RETAINER, SPRING	2			
20		66845	PLATE, RETAINER-STARTER PA	1			
21	12	57860	WASHER, WEAR-SHEAVE SHAF	1			
22		61003	SHAFT, SHEAVE	1			
23	50	28985A	STARTER CABLE ASSEMBLY	1			
23		47341A	STARTER CABLE	1	(FOR MANUAL STARTING OF EL		
24		28747	HANDLE, STARTER CABLE	1	UNITED STATES 4962055 AND I		
25		28748	RETAINER, STARTER CABLE AN	1			
24&2		79470A	HANDLE AND RETAINER ASSEM	1	STARTER CABLE UNITED STA		
26		70969	CABLE, INTERLOCK	1	UNITED STATES 4357640 THRL		
27	10	32228	SCREW	1	INTERLOCK CABLE TO EXHAUS		
28	10	69022	SCREW	1	INTERLOCK CABLE TO STARTE		
29	13	27660	LOCKWASHER, INTERLOCK CAB	1			
30	12	26013	WASHER, INTERLOCK CABLE SC	2			
31		57236	CAM, SLIDING-STARTER HOUSI	1			
32	24	70086	SPRING, SLIDING CAM	1			
33	12	37998	WASHER, INTERLOCK CABLE	1			
34	18	26953	COTTER PIN, INTERLOCK CABLE	1			
35		65757A	TOGGLE ASSEMBLY, STARTER I	1			
36	10	57249	SCREW, TOGGLE TO STARTER I	1			
37	23	26856	BUSHING, TOGGLE SCREW	2			
38	24	57279	SPRING, TOGGLE SCREW	1			
39		76669	CABLE	1	INTERLOCK ALSO USED ON TU		