



Parts List					
Ref	Class	Part	Description	Qty	Comment
-	1643	6038A 5	GEAR HOUSING ASS'Y COMP. (S	1	UNITED STATES 4357640 THRL
-	1643	6038A 7	GEAR HOUSING ASS'Y, COMP. (L	1	UNITED STATES 4357640 THRL
-	1643	6038A17	GEAR HOUSING ASS'Y, COMP. (S	1	UNITED STATES 4576237 AND I
-	1643	6038A18	GEAR HOUSING ASS'Y, COMP. (L	1	UNITED STATES 4576237 AND I
1	1643	6038A 6	GEAR HOUSING ASSEMBLY	1	(SEE "GEAR HOUSING ASSEMB
50		69792	CAM, SHIFT	1	UNITED STATES 4357640 THRL
50		54346	CAM, SHIFT	1	UNITED STATES 4576237 AND I
51		38441	FOLLOWER, CAM	1	
52		20843	SLIDE, CROSS PIN	1	
53	24	39845	SPRING, COMPRESSION - CAM	1	
54	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR	3
55	31	38356A 1	TAPERED ROLLER BEARING A	1	
56	31	21739	BEARING, ROLLER - FORWARD	1	
57	43	55608	FORWARD GEAR	1	
58	52	47586	RATCHET, SLIDING CLUTCH	1	
59	17	38113	PIN, CROSS - RATCHET TO PR	1	
60	24	38114	SPRING, RETAINING - CROSS	1	
61	44	55911	SHAFT, PROPELLER	1	UNITED STATES 4357640 THRL
62	44	75365	SHAFT PROPELLER	1	UNITED STATES 4576237 AND I
62	43	66554	REVERSE GEAR	1	
63	15	20927A 1	SHIM, THRUST WASHER TO GE	AR	3
64	12	32004	WASHER, THRUST - REVERSE	1	
65	30	20839	BEARING, BALL - REVERSE GE	1	
66	25	31986	"O RING, BEARING CARRIER	1	1
67		69386A 1	BEARING CARRIER ASSEMBLY	1	
68	31	21700	BEARING, ROLLER - BEARIN	1	
69	26	69188	OIL SEAL, BEARING CARRIER	1	
70	26	69189	OIL SEAL, LINE CUTTER	1	
71	28	30281	KEY, LOCATING - BEARING C	1	
72	14	53012	TAB WASHER, GEAR HOUSING	1	
73		53013	COVER, GEAR HOUSING	1	
74		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1	
75	10	66024	SCREW, TRIM TAB TO GEAR H	1	
76	12	45175	WASHER, DRIVE SHAFT HOUS	1	
77	11	34863	NUT	1	DRIVE SHAFT HOUSING TO GE,
78	12	65791	WASHER, DRIVE SHAFT HOUS	1	
79	11	34933	NUT	1	DRIVE SHAFT HOUSING TO GE,
80		65758	THRUST HUB, FRONT	1	UNITED STATES 4357640 THRL
81		62124A 1	THRUST HUB ASSEMBLY, REAR	1	
82	12	31992	WASHER, CUPPED - THRUST	1	
83		72245	THRUST HUB, FRONT	1	UNITED STATES 4576237 AND I