



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY	1,1		
2	27	23005	GASKET, CHECK VALVE TO HOU	2,2		
3	21	30430	VALVE, CHECK	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSING	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
8		23008	COVER, FUEL PUMP	1,1		
9	27	30276	GASKET, FUEL PUMP COVER	1,1		
10	10	29126	SCREW, FUEL PUMP MOUNTING	2,2		
11	10	29029	SCREW, FUEL PUMP MOUNTING	1,1		
12	22	22949	CONNECTOR, PUMP INLET TO F	1,1		
13	22	22946	SLEEVE, RUBBER - CONNECTOR	1,1		
14	11	22948	NUT, CONNECTOR TO FUEL LINE	1,1		
15	32	32094	FUEL LINE, FUEL PUMP TO LOW	1,1		
16	22	22995	ELBOW, FUEL PUMP INLET	1,1		
17	22	22946	SLEEVE, RUBBER	1,1		
18	11	22948	NUT, ELBOW	1,1		
19	32	30036	FUEL LINE, FUEL PUMP TO ADAP	1,1		
20		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1		
21		30187	STEM, CHECK UNIT ADAPTOR	1,1		
22	25	20415	"O" RING, ADAPTOR STEM	1,1		
23	24	30189	SPRING, ADAPTOR STEM	1,1		
24		30188	CUP WASHER, ADAPTOR	1,1		
25	10	20784	SCREW, ADAPTOR TO BOTTOM	2,2		
26	11	24652	NUT, ADAPTOR SCREW	2,2		