



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32970	RECTIFIER ASSEMBLY	1		
2	13	26993	LOCKWASHER, RECTIFIER MO	1		
3	11	21929	NUT, RECTIFIER MOUNTING S	1		
4	32	28373	SLEEVE, RECTIFIER LEADS	3		
5	10	29852	SCREW, HARNESS AND STATOF	3		
6	11	29488	NUT, HARNESS AND STATOR LE	3		
7		28597	BRACKET, RECTIFIER MOUNTIN	1		
8	10	21091	SCREW, RECTIFIER BRACKET TI	2		
9	11	24652	NUT, BRACKET MOUNTING SCR	2		
10	50	30829	STARTER MOTOR (DELCO-REM)	1		
11	10	22698	SCREW, STARTER MOTOR TO C	2		
12	13	26993	LOCKWASHER, STARTER MOTO	2		
13		25596	WIRE, STARTER MOTOR TO STA	1		
14	10	29197	SCREW, GROUND WIRE TO STA	1		
15	13	26992	LOCKWASHER, GROUND WIRE I	1		
16		28016A 1	GROUND STRAP ASSEMBLY	1		
17		32445	STARTER SOLENOID	1		
18	13	26996	LOCKWASHER, SOLENOID TERN	2		
19	11	20645	NUT, SOLENOID TERMINAL (#10	2		
20	13	26993	LOCKWASHER, SOLENOID TERN	2		
21	11	20083	NUT, SOLENOID TERMINAL - INE	1		
22	11	26062	NUT, CAP - SOLENOID TERMINA	1		
23	10	31208	SCREW, STARTER SOLENOID TI	2		
24	54	24836	CLAMP, HARNESS LEAD WIRE (I	1		
25	54	25231	CLAMP, HARNESS LEAD WIRE (I	1		
26		22789	"D" WASHER, CLAMP FASTENIN	2		
27	10	30009	SCREW, HARNESS LEAD WIRE (I	2		
28		33401	WIRING HARNESS (INTERNAL)	1		
29		26079	PLATE, BACKING - WIRING HAR	1		
30	10	26128	SCREW, BACKING PLATE TO BO	4		
31	24	28975	SPRING,GARTER - INTERNAL W	1		
32	54	22783	"S" CLIP, WIRING HARNESS LEA	2		