



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1440	1797A 1	CLAMP BRACKET ASSEMBLY	2,2,2,2		
2		28403A 3	THUMB SCREW ASSEMBLY	2,2,2,2		
3	12	28404	WASHER, THUMB SCREW	2,2,2,2		
4		30664	TUBE, TILT - CLAMP BRACKET T	1,1,1,1		
5	15	30497A 1	SHIM, CLAMP BRACKET TO SWI	2,2,2,2		
6	11	30499	NUT, TILT TUBE FASTENING	2,2,2,2		
7		30498	CAP, PLASTIC - TILT TUBE ENDS	2,2,2,2		
8	16	20221	STUD, CLAMP BRACKET	1,1,1,1		
9	23	20222	SPACER, CLAMP BRACKET STUC	1,1,1,1		
10	13	26993	LOCKWASHER, CLAMP BRACKET	2,2,2,2		
11	11	20083	NUT, STUD TO CLAMP BRACKET	2,2,2,2		
12	17	30687A 1	TILT LOCK PIN ASSEMBLY	1,1,1,1		
13		26903A 3	REVERSE LOCK ASSEMBLY	1,1,1,1		
14	18	45882	COTTER PIN, REVERSE LOCK TC	1,1,1,1		
15	24	29821	SPRING, TENSION - REVERSE LI	1,1,1,1		
16	17	25598	ROLL PIN, REVERSE LOCK SPRIN	1,1,1,1		
17		20208	SHAFT, REVERSE LOCK TO SWI	1,1,1,1		
18	1442	2501A 1	SWIVEL BRACKET ASSEMBLY (S	1,1,1,1		
18	1442	2502A 1	SWIVEL BRACKET ASSEMBLY (L	1,1,1,1		
19	26	32911	OIL SEAL, SWIVEL BRACKET	2,2,2,2		
20	22	23612	FITTING, GREASE - SWIVEL BF	1,1,1,1		
21		29359	LUBRICAP, SWIVEL BRACKET GF	1,1,1,1		
23		29056	LEVER, TILT STOP - PORT SIDE	1,1,1,1		
22		29057	LEVER, TILT STOP - STARBOARD	1,1,1,1		
24	10	29054	SCREW, ANCHOR - TILT STOP LI	2,2,2,2		
25	23	29055	SPACER, TILT STOP LEVER ANC	2,2,2,2		
26	10	27790	SCREW, RETAINING - TILT STOP	2,2,2,2		
27	13	20846	WASHER, WAVE - RETAINING SI	2,2,2,2		
28	11	20184	NUT, ANCHOR AND RETAINING	4,4,4,4		
29	12	25176	WASHER, SWIVEL PIN TO BOTT	1,1,1,1		
29	12	26837	WASHER, SWIVEL PIN TO BOTO	AR,AR,		
30		35402	YOKE, BOTTOM	1,1,1,1		
31	17	28418A 5	SWIVEL PIN AND STEERING ARM	1,1,1,1		
31	17	28419A 5	SWIVEL PIN AND STEERING ARM	1,1,1,1		
32	10	31830	SCREW, STEERING ARM TO RID	1,1,1,1		
33	11	20509	NUT, STEERING ARM SCREW	1,1,1,1		
34	10	33986	BOLT, UPPER MOUNT TO SWIVE	2,2,2,2		
35		30711	BUMPER, STEERING ARM	1,1,1,1		
36	11	28202	NUT, RETAINING - SWIVEL PIN	1,1,1,1		
37	38	39784	SERIAL PLATE	1,1,1,1		
38	10	26612	SCREW, DRIVE - SERIAL PLATE	4,4,4,4		