



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	394	2271A 2	MAGNETO ASSEMBLY, COMPLE	1,1,1,1		
2	45	27951	SHAFT, MAGNETO DRIVE	1,1,1,1		
-		29321A 9	MAGNETO ADAPTOR AND PILOT	1,1,,		
3		29321A 1	MAGNETO PILOT ASSEMBLY	1,1,,		
3		39560A 1	MAGNETO PILOT ASSEMBLY	,,1,1		
4	30	20066	BALL BEARING, MAGNETO PUL	1,1,1,1		
5	24	27944	SPRING, HORSESHOE - MAGNE	1,1,1,1		
6	17	27962	PIN, ANCHOR - HORSESHOE S	1,1,1,1		
7	12	29245	WASHER, HORSESHOE SPRIN	1,1,1,1		
8		27946A 1	ECONOMIZER COLLAR AND PI	1,1,1,1		
9	17	27961	PIN, ECONOMIZER COLLAR -	1,1,1,1		
10	22	25094	FITTING, GREASE - ECONOMI	1,1,1,1		
11		38230A 1	THROTTLE ACTUATOR ASSEM	1,1,1,1		
12	23	26602	BUSHING, NYLON - THROTTL	1,1,1,1		
13	10	32078	SCREW, THROTTLE ACTUATO	2,2,2,2		
14		30043	ADAPTOR, MAGNETO	1,1,1,1		
15	22	25094	FITTING, GREASE - MAGNETO	1,1,1,1		
16	12	27939	WASHER, MAGNETO PILOT	1,1,1,1		
17	14	27960	TAB WASHER, ADAPTOR CAP	1,1,1,1		
18	13	27959	WASHER, WAVE - MAGNETO B	1,1,1,1		
19		27955	CAP, MAGNETO ADAPTOR ANC	1,1,1,1		
20		27947	SWIVEL, LINKAGE - ECONOMIZ	1,1,1,1		
21		25996A 1	SWIVEL AND LINK ROD ASSEM	1,1,1,1		
22	11	25168	NUT, UPPER LINK ROD ADJUS	1,1,1,1		
23		37700	ROD, LINK - UPPER	1,1,1,1		
24		27948	SWIVEL, UPPER LINK ROD TO	1,1,1,1		
25		37688	LEVER, THROTTLE CONTROL	1,1,1,1		
26	10	34613	SCREW, THROTTLE LEVER TO E	1,1,1,1		
27	12	29395	WASHER, THROTTLE LEVER SC	2,2,2,2		
28	23	29529	BUSHING, THROTTLE LEVER SC	1,1,1,1		
29	24	37934	SPRING, QUICK DISCONNECT - T	1,1,1,1		
30	10	38069	SCREW, ANCHOR - QUICK DISCC	1,1,1,1		
31	10	30110	SCREW, ADAPTOR AND PILOT T	4,4,4,4		
32	10	22040	SCREW ADAPTOR AND PILOT TI	3,3,3,3		
33	12	20084	WASHER, ADAPTOR AND PILOT	3,3,3,3		
34	11	20083	NUT, ADAPTOR AND PILOT TO C	3,3,3,3		
35	28	28657	KEY, MAGNETO DRIVING	1,1,1,1		
36		29784	HUB, DRIVEN PULLEY	1,1,1,1		
37		29783A 1	DRIVEN PULLEY ASSEMBLY	1,1,1,1		
38	17	24873	PIN, ROLL - FLANGE LOCATING	2,2,2,2		
39		29785	FLANGE, DRIVEN PULLEY	1,1,1,1		