



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	393	2799A 7	DISTRIBUTOR ASSEMBLY, COM	1	
1	393	2799	HOUSING, PRIMARY	1	
2	13	26917	WASHER, WAVE - PRIMARY HO	2	
3	393	2795	SHIM, TRIGGER HOUSING TO I	AR	
4	393	2918A 1	TRIGGER HOUSING ASSEMBL	1	
5	53	45906	RING, RETAINER - ROTOR SHA	2	
6	30	26379	BEARING, BALL - ROTOR SHAF	2	
7	393	2921A 3	ROTOR SHAFT ASSEMBLY	1	
8	17	20032	DOWEL PIN, ADAPTOR TO PRI	2	
9	393	3014A 2	ADAPTOR ASSEMBLY, HOUSIN	1	
10	27	46351	GASKET, ADAPTOR TO PRIM	1	4
10	27	45910	GASKET, ADAPTOR TO PRIM	1	4
11	10	32627	SCREW, ADAPTOR TO HOUSIN	2	
12	11	37806	NUT, ADAPTOR TO HOUSING	2	
13	10	20646	SCREW, SHIM AND TRIGGER	2	
14	23	32914	SLEEVE, TRIGGER HOUSING	1	
15	22	31521A 1	ELBOW ASSEMBLY, VENT HOSE	1	
16	27	36268	GASKET, DISTRIBUTOR CAP T	1	4
17	393	2955A 2	DISTRIBUTOR CAP ASSEMBLY	1	
18	22	31521	ELBOW, VENT HOSE - DISTR	1	
19	393	1293A 1	BRUSH AND SPRING ASSEM	1	
20	10	45914	SCREW, DISTRIBUTOR CAP	4	
21	12	26436	WASHER, DISTRIBUTOR CAP	4	
22	11	37806	NUT, DISTRIBUTOR CAP FAST	4	
23	393	3018A 1	HIGH TENSION CABLE ASSEM	1	
--		20121	CONNECTOR, HIGH TENSION	1	
24	332	2854	BOOT, HIGH TENSION CABLE	1	
25	393	1275	SLEEVE, HIGH TENSION CAL	1	
26	25	26547	GROMMET, HIGH TENSION C	1	
27	32	46398	SLEEVE, HIGH TENSION CABLE	1	
28		23564A 8	SPARK PLUG LEAD ASSEMBLY	1	ORDER 36549A1 FOR REPLACE
28		23564A 9	SPARK PLUG LEAD ASSEMBLY	3	ORDER 36549A1 FOR REPLACE
--		20121	CONNECTOR, SPARK PLUG L	4	
25	393	1275	SLEEVE, SPARK PLUG LEAD TI	4	
29		20119A 1	PROTECTOR, SPARK PLUG LE	4	
30	32	46768	SLEEVE (LEADS 1, 2, 3, 4) - 6"	2	
31	32	26527	SLEEVE, HIGH TENSION LEAD	2	