



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1626	2470A18	GEAR HOUSING ASSEMBLY, CO	1,1	
-	1626	2470A20	GEAR HOUSING ASSEMBLY, CO	1,1	
1	1626	2470A16	GEAR HOUSING ASSEMBLY	1,1	
2	31	20231	BEARING, ROLLER - DRIVE S	1,1	
3	16	37728	STUD, WATER PUMP BODY A	3,3	
4	16	45177	STUD, GEAR HOUSING TO D	2,2	
5	12	45176	WASHER, GEAR HOUSING STL	2,2	
6		38071	PLATE, SUPPORT - EXHAUST	1,1	
7		37721	SEAL, EXHAUST TUBE	1,1	4
8	43	20834	GEAR, PINION - DRIVE SHAFT	1,1	
9	14	29163	TAB WASHER, PINION GEAR S	1,1	
10	10	20925	SCREW, PINION GEAR TO DRP	1,1	
11		32008	SHAFT, SHIFT - LOWER	1,1	
12	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1	
13	25	25439	"O" RING, SHIFT SHAFT BUSHI	1,1	4
14	23	38993A 2	BUSHING ASSEMBLY, SHIFT SI	1,1	
15	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1,1	
16	12	31266	WASHER, RUBBER - SHIFT S	1,1	
17		25138	CAM, LOWER - REVERSE LOCK	1,1	
18		29823	CAM, UPPER - REVERSE LOCK	1,1	
19	45	38466	DRIVE SHAFT (SHORT SHAFT)	1,1	
19	45	46394	DRIVE SHAFT (LONG SHAFT)	1,1	
20	15	20929A 1	SHIM, BEARING TO GEAR HOU	AR,AR	
21	30	20861	BEARING, BALL - DRIVE SHAFT	1,1	
22	53	29116	RING, SNAP - BALL BEARING RE	1,1	
23	15	20929A 1	SHIM, BEARING TO WATER PL	AR,AR	
24	27	32771	GASKET, WATER PUMP BASE	1,1	4
25	25	26855	"O" RING, WATER PUMP BASE	1,1	4
26	46	39531A 1	WATER PUMP BASE ASSEMBL	1,1	
27	26	26782	OIL SEAL, WATER PUMP BAS	1,1	
28	26	23300	OIL SEAL, WATER PUMP BAS	1,1	
29	17	35973	DOWEL PIN, WATER PUMP E	2,2	
30	27	32769	GASKET, LOWER - WATER PUI	1,1	4
31		32768	PLATE, FACE - WATER PUMP E	1,1	
32	27	32770	GASKET, UPPER - FACE PLATE	1,1	4
33	47	20268	IMPELLER, WATER PUMP	1,1	
34	17	23733	PIN, IMPELLER DRIVE	1,1	
35	26	38452	SEAL, WATER PUMP BODY TO	1,1	4
36	12	38453	WASHER, CUPPED - WATER T	1,1	
37	46	32767A 1	WATER PUMP BODY ASSEMBL	1,1	
38		22001	INSERT, WATER PUMP BOD	1,1	