



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2116	3232A 2	BOTTOM COWL ASSEMBLY	1,1,		
1	2116	3643A 1	BOTTOM COWL ASSEMBLY	1,1,		
2		29206	COVER, PLUG - BOTTOM COWL	1,1,		3
3	10	26128	SCREW, PLUG COVER TO BOT	4,4,		3
4	13	26995	LOCKWASHER, PLUG COVER S	4,4,		3
5	11	26419	NUT, PLUG COVER SCREW	4,4,		3
6	16	20467	STUD, BOTTOM COWL TO REA	4,4,4,4		
7	11	20361	NUT, BOTTOM COWL STUD	4,4,4,4		
8	32	34395A 1	TUBE, VENT - IGNITION DIRVER	2,2,2		
8	32	34395A 1	TUBE, VENT - IGNITION DIRVER	2,2,		*
8	32	34395A 1	TUBE, VENT DISTRIBUTOR OUT	2,2,		
9	22	31521	ELBOW, DISTRIBUTOR AND IGN	2,2,2,2		
10		47764	STRAP, VENT HOSE	1,1,1,1		
--	54	49218	CLAMP, VENT HOSE	1,1,1,1		
--	10	21722	SCREW, VENT HOSE CLAMP (5/8	1,1,1,1		
--	11	46887	NUT, VENT HOSE CLAMP SCREW	1,1,1,1		
11		48035A 1	STOP SWITCH ASSEMBLY	1,1,		
12		30859	INSULATOR, SLEEVE - INNER	1,1,		
13	24	30858A 1	SPRING AND CONTACT ASSEM	1,1,		
14		38950A 1	COVER ASSEMBLY, STOP SWIT	1,1,		
15	12	38949	WASHER, SEALING - STOP S	1,1,		
16	13	21972	LOCKWASHER, CONNECTOR E	1,1,		
17	11	21971	NUT, CONNECTOR BASE TO BI	1,1,		
18		37943A 1	COVER PLATE ASSEMBLY	1,1,1,1		
19		37944	PAD, SOUND - COVER PLATE	1,1,1,1		
20	10	30009	SCREW, COVER PLATE TO BOT	3,3,3,3		
21		37695	BOOT, CONTROL CABLE	1,1,1,1		
22		23760	BAFFLE, BOTTOM COWL	1,1,1,1		
23	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3,2,		
23	10	52867	SCREW, BAFFLE TO BOTTOM CC	2,3,		
24		37637	BOOT, FUEL CONNECTOR	1,1,1,1		
25		37692	SUPPORT, EXTERNAL WIRING F	1,1,		
26	10	21937	SCREW, HARNESS SUPPORT T	2,2,		
27	11	46887	NUT, HARNESS SUPPORT SCRE	2,2,		
28	32	26407	HOSE, WATER TELL TALE - CYLI	1,1,1,1		
29	22	29111	CONNECTOR, WATER TELL TAL	1,1,		
30		52889	NOZZLE, TELL TALE HOSE TO B	1,1,		
31	10	34222	SCREW, TELL TALE NOZZLE TO	1,1,		
32	54	48123	CLAMP, WATER TELL TALE HOS	2,2,2,2		
33		47616A 2	PLATE ASSEMBLY, EXHAUST EX	1,1,1,1		
34	12	28452	WASHER, NYLON, WATER INLI	1,1,1,1		