



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1,1		
2	12	33001	WASHER, FLYWHEEL NUT	1,1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1,1		
4	223	2402A	FLYWHEEL ASSEMBLY	1,,		
4	223	2427A	FLYWHEEL ASSEMBLY (USE ON	,1,,		
4	223	2403A	FLYWHEEL ASSEMBLY (USE TH	,1,,		
4	223	2403A	FLYWHEEL ASSEMBLY (STARTE	,1,,1		
5	50	39837	RATCHET, FLYWHEEL - FLEX F	1,,1,		
6	10	32417	SCREW, PLATE AND RATCHET	8,8,8,8		
7	10	46467	SCREW, FLEX PLATE TO FLYW	8,8,8,8		
8	17	26618	PIN, DOWEL - PULLEY TO FLYW	1,1,1,1		
9		29788	FLANGE, FLYWHEEL PULLEY	1,1,1,1		
10		30306	PULLEY, FLYWHEEL	1,1,1,1		
11		29787	HUB, FLANGE - FLYWHEEL PUI	1,1,1,1		
12	398	2996	STATOR, ALTERNATOR - FLYWF	,1,,1		
13	10	52720	SCREW, STATOR TO UPPER EN	,4,,4		
14	54	24836	CLAMP, STATOR LEAD TO CRAN	,1,,1		
15	10	34222	SCREW, STATOR LEAD CLAMP F	,1,,1		
16		22789	"D" WASHER, STATOR LEAD CL	,1,,1		
17	54	46379	CLIP, STATOR LEAD TO CRAN	,1,,1		