



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2116	5761A 1	BOTTOM COWL ASSEMBLY	1		0
2		57786	COVER, PLUG - BOTTOM COWL	1	REMOVE - NOT REQUIRED ON I	
3		45862	SCREW, PLUG COVER TO BOTTL	2	REMOVE - NOT REQUIRED ON I	
4		26996	LOCKWASHER, PLUG COVER SC	2	REMOVE - NOT REQUIRED ON I	
-		20128	WASHER, PLUG COVER SCREW	2	REMOVE - NOT REQUIRED ON I	
5		68169	STUD, BOTTOM COWL TO REAR	4		
6		35888	NUT, BOTTOM COWL STUD	4		
7		59065A 4	STOP SWITCH ASSEMBLY MANL	1	MANUAL	
8		60239	SPRING, STOP SWITCH	1	MANUAL	
9		61577A 1	CONTACT ASSEMBLY, STOP SW	1	MANUAL	
10		38950A 1	COVER ASSEMBLY, STOP SWITC	1	MANUAL	
11		59061	WASHER, STOP SWITCH	1	MANUAL	
12		26996	LOCKWASHER, STOP SWITCH	1	MANUAL	
13		20645	NUT, GROUND LEAD TO STOP S	1	MANUAL	
14		21972	LOCKWASHER, CONNECTOR BA	1	MANUAL	
15		21971	NUT, CONNECTOR BASE TO BO	1	MANUAL	
16		56319A 5	WIRE, SWITCH BOX TO STOP S	1	MANUAL	
17		60948A 1	COVER PLATE ASSEMBLY	1		
18		62568	SCREW, COVER PLATE TO BOT	3		
19		37695	BOOT, CONTROL CABLE	1		
20		37637	BOOT, FUEL CONNECTOR	1		
21		37692	SUPPORT, EXTERNAL WIRING F	1	ELECTRIC	
22		67916	SCREW, HARNESS SUPPORT TC	2	ELECTRIC	
23		46887	NUT, HARNESS SUPPORT SCRE	2	ELECTRIC	
24		26407	HOSE, TELL TALE HOSE TO BOT	1		
25		69791	NOZZLE, TELL TALE HOSE TO B	1		0
26		66849	CLAMP, NOZZLE - TELL TALE	1		
27		48408	SCREW, NOZZLE CLAMP TO BO	1		