



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		70287A 3	PLATE ASSEMBLY, EXHAUST EX	1		
1	23	27132	BUSHING, EXHAUST EXTENSION	1		
3	12	38453	WASHER, NYLON - WATER INLE	1		
4	26	38452	SEAL, RUBBER - WATER TUBE	1		4
5		38500	RETAINER, WATER TUBE SEAL	1		
6	10	69069	SCREW, RETAINER TO EXHAUS	1		
7	27	37725	GASKETT, POWERHEAD TO EXP	1		4
8		38156	SEAL, RUBBER - EXHAUST EXT	1		
9		38155	STRIP, RUBBER SEAL RETAININ	1		
10	10	37571	SCREW, RETAINING STRIP TO E	6		
11	27	38501	GASKET, EXHAUST EXTENSION	1		4
12		59037A 2	LEVER, THROTTLE AND SHIFT C	1		
13	24	38005	SPRING, COMPRESSION - QUICK	2		
14	23	37927	BUSHING, NYLON - QUICK DISCC	2		
15	17	23928	PIN, ROLL - QUICK DISCONNECT	2		
16		37926	RETAINER, NYLON BEARING TO	1		
17	10	37923	SCREW, RETAINER TO EXHAUS	1		
18		46933A 1	GROUND STRAP ASSEMBLY, CR	2		
19		46933A 2	GROUND STRAP ASSEMBLY, HC	2		
20	10	62568	SCREW, GROUND STRAP (3/9" S	4		
21		57244A 3	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4141000 THRL	
21		57244A 4	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4141000 THRL	
22		55692	COUPLING, UPPER SHIFT SHAF	1	UNITED STATES 4141000 THRI	
23	23	26600	BUSHING, NYLON - UPPER SHIF	1	UNITED STATES 4141000 THR	
21		69548A 1	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4280270 AND I 0	
21		69549A 1	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4280270 AND I 0	
24	12	24664	WASHER, SHIFT CONTROL ACTI	1		
25	11	35045	NUT, SHIFT CONTROL ACUATOF	1		
26		37948A 5	ACTUATOR ASSEMBLY, SHIFT C	1	UNITED STATES 4141000 THRL	
26		72854A 3	ACTUATOR ASSEMBLY, SHIFT C	1	UNITED STATES 4280270 AND	
27	24	37934	SPRING, SHIFT CABLE	1		
28	10	38069	SCREW, SPRING TO ACTUATOR	1		
29		37932	BEARING, NYLON - SHIFT CONT	1		
30	10	36137	SCREW, BEARING TO SHIFT CO	1		
31	13	21272	LOCKWASHER, BEARING SCREW	1		
32		37935	RAIL, SHIFT CONTROL BEARING	1		
33	10	69028	SCREW, RAIL TO EXHAUST MAN	1		
34	13	26992	LOCKWASHER, RAIL SCREW	1		