



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1,1,1		
2	12	26617	WASHER, FLYWHEEL NUT	1,1,1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1,1,1		
4	208	1996A 1	FLYWHEEL ASSEMBLY - NOT AS	1,1,1,1		
4	215	1850A 6	FLYWHEEL ASSEMBLY	1,1,1,1		
4	215	1850A 4	FLYWHEEL ASSEMBLY	1,1,1,1	SERIAL J1477910-01480087	
4	215	2026A 2	FLYWHEEL ASSEMBLY	1,1,1,1	SERIAL J1480088-01480159	
5		29788	FLANGE, FLYWHEEL PULLEY	1,1,1,1		
6		30306	PULLEY, FLYWHEEL	1,1,1,1		
7		29787	HUB, FLANGE - FLYWHEEL PULLEY	1,1,1,1		
8	17	26618	DOWEL PIN, FLYWHEEL PULLEY	1,1,1,1		
9	50	25263	RATCHET, FLYWHEEL LATERAL	1,1,1,1		
10	10	29238	SCRW,RATCHET TO FLYWHEEL	3,3,3,3		
11	398	1455	STATOR, ALTERNATOR - FLYWHEEL	1,1,1,1	SERIAL J1477910-01480087	
11	398	2027	STATOR, ALTERNATOR - FLYWHEEL	1,1,1,1	SERIAL J1480088-01480159	
11	398	2085	STATOR, ALTERNATOR - FLYWHEEL	1,1,1,1		
12		22647	DISCONNECT, KNIFE SPLICE	2,2,2,2		
13	32	26528	SLEEVE, RUBBER - STATOR LEAD	2,2,2,2		
14	10	29249	SCREW, STATOR TO UPPER END	4,4,4,4	SERIAL J1477910-01480087	
14	10	32614	SCREW, STATOR TO UPPER END	4,4,4,4	SERIAL J1480088-01480159	
15	54	24836	CLIP, STATOR LEAD TO CRANK	1,1,1,1		
16	10	30009	SCREW, STATOR LEAD CLIP	1,1,1,1		