



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	1972A 3	GEAR HOUSING ASSEMBLY, CO	1,1		
1	1626	1972A 1	GEAR HOUSING ASSEMBLY	1,1		
2	16	32027	STUD, WATER PUMP BODY	3,3		
3	16	32017	STUD, GEAR HOUSING TO DRIV	2,2		
4	31	20231	BEARING, ROLLER - DRIVE S	1,1		
5		32008	SHAFT, SHIFT - LOWER	1,1		
6	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1		
7	25	25439	"O" RING, SHIFT SHAFT BUSHI	1,1		
8	23	28374A 1	BUSHING ASSEMBLY, SHIFT SI	1,1		
9	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1,1		
10		25138	CAM, LOWER - REVERSE LOCK	1,1		
11		29823	CAM, UPPER - REVERSE LOCK	1,1		
12	45	38466	DRIVE SHAFT (STANDARD)	1,1		
13	15	20929A 1	SHIM, DRIVE SHAFT BEARING	AR,AR		
14	30	20861	BEARING, BALL - DRIVE SHAFT	1,1		
15	53	29116	RING, SNAP - BALL BEARING R	1,1		
16	15	20929A 1	SHIM, BEARING TO WATER PL	AR,AR		
17	43	20834	GEAR, PINION - DRIVE SHAFT	1,1		
18	14	29163	TAB WASHER, PINION GEAR F	1,1		
19	10	20925	SCREW, PINION GEAR TO DRIP	1,1		
20	25	26855	"O" RING, WATER PUMP BASE	1,1		
21	46	32012A 1	WATER PUMP BASE ASSEMBL	1,1		
22	26	23300	OIL SEA, WATER PUMP BASE	1,1		
23	17	29596	DOWELL PIN, WATER PUMP	2,2		
24	16	20990	STUD, WATER PUMP BASE	2,2		
25	26	32005	SEAL, WATER PUMP BODY TO	1,1		
26	32	31994	TUBE, WATER INTAKE - GEAR	1,1		
27	26	29677	SEAL, WATER INTAKE TUBE T	1,1		
28	23	32052	SLEEVE, WATER INTAKE TUBE	1,1		
29	27	32011	GASKET, LOWER - WATER PUI	1,1		
30		32009	PLATE, FACE - WATER PUMP E	1,1		
31	27	32010	GASKET, UPPER - FACE PLATE	1,1		
32	47	20268	IMPELLER, WATER PUMP	1,1		
33	17	23733	PIN, IMPELLER DRIVE	1,1		
34	46	32013A 1	WATER PUMP BODY ASSEMBL	1,1		
35		32001	INSERT, WATER PUMP BOD	1,1		
36	26	32121	OIL SEA, WATER PUMP BOD	1,1		
37	13	26992	LOCKWASHER, WATER PUMP	5,5		
38	11	29598	NUT, WATER PUMP BODY ANC	5,5		
39	26	25192	SEAL, WATER PUMP BODY TO	1,1		
40	25	20272	RING, RUBBER, CENTRIFUGAL	1,1		