



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	2040A 3	GEAR HOUSING ASSEMBLY, CO	1,1,1,1		
1	1626	2040A 1	GEAR HOUSING ASSEMBLY	1,1,1,1		
2	16	32027	STUD,WATER PUMP BODY AN	3,3,3,3		
3	16	32017	STUD,GEAR HOUSING TO DRP	2,2,2,2		
4	31	20231	BEARING, ROLLER - DRIVE SH	1,1,1,1		
5		32008	SHAFT,SHIFT - LOWER	1,1,1,1		
6	18	20233	CLIP,RETAINING - SHIFT SHAFT	1,1,1,1		
7	25	25439	"O"RING,SHIFT SHAFT BUSHING	1,1,1,1		
8	23	28374A 1	BUSHING ASSEMBLY,SHIFT SHA	1,1,1,1		
9	26	31249	OIL SEAL,SHIFT SHAF BUSHIN	1,1,1,1		
10		25138	CAM,LOWER - REVERSE LOCKIN	1,1,1,1		
11		29823	CAM,UPPER - REVERSE LOCKIN	1,1,1,1		
12	45	38466	DRIVE SHAFT(STANDARD)	1,1,1,1		
13	15	20929A 1	SHIM,BEARING TO GEAR HOUSI	AR,AR,		
14	30	20861	BEARING,BALL - DRIVE SHAFT	1,1,1,1		
15	53	29116	RING,SNAP - BALL BEARING RET	1,1,1,1		
16	15	20929A 1	SHIM,BEARING TO WATER PUM	AR,AR,		
17	43	20834	GEAR,PINION - DRIVE SHAFT	1,1,1,1		
18	14	29163	TAB WATER,PINION GEAR FAST	1,1,1,1		
19	10	20925	SCREW, PINION GEAR TO DRP	1,1,1,1		
20	27	32771	GASKET,WATER PUMP BASE TC	1,1,1,1		
21	25	26855	"O"RING,WATER PUMP BASE	1,1,1,1		
22	46	32766A 1	WATER PUMP BASE ASSEMBLY	1,1,1,1		
23	26	23300	OIL SEAL,WATER PUMP BASE	1,1,1,1		
24	17	29596	DOWEL PIN,WATER PUMP BAS	2,2,2,2		
25	27	32769	GASKET,LOWER - WATER PUMF	1,1,1,1		
26		32768	PLATE,FACE - WATER PUMP BA	1,1,1,1		
27	27	32770	GASKET,UPPER - FACE PLATE T	1,1,1,1		
28	47	20268	IMPELLER,WATER PUMP	1,1,1,1		
29	17	23733	PIN,IMPELLER DRIVE	1,1,1,1		
30	46	32767A 1	WATER PUMP BODY ASSEMBLY	1,1,1,1		
31		32001	INSERT,WATER PUMP BODY	1,1,1,1		
32	26	32121	OIL SEAL,WATER PUMP BODY	1,1,1,1		
33	13	26992	LOCKWASHER,WATER PUMP BC	3,3,3,3		
34	11	29598	NUT,WATER PUMP BODY AND E	3,3,3,3		
35	26	25192	SEAL,WATER PUMP BODY TO W	1,1,1,1		
36	25	20273	RING,RUBBER - CENTRIFUGAL S	1,1,1,1		
37	25	29619	"O"RING,UPPER - DRIVE SHAFT	1,1,1,1		
38	10	29608	SCREW,GEAR HOUSING FLUSHI	1,1,1,1		
39	27	29586	GASKET,GEAR HOUSING FLUSH	1,1,1,1		
40	26	29612	SEAL,GEAR HOUSING FLUSHING	1,1,1,1		