



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		31875	HANDLE, CHROME - TOP COWL	1,1	
2		31003	HANDLE, INSIDE - TOP COWL	1,1	
3		35496	PAD, BUMPER - TOP COWL HAN	1,1	
4	10	22421	SCREW, FRONT - HANDLE TO TI	1,1	
5	11	20361	NUT, FRONT HANDLE FASTENIN	1,1	
6	23	29561	SPACER, REAR HANDLE STUD	1,1	
7	13	26992	LOCKWASHER, REAR HANDLE S	1,1	
8	11	21825	NUT, REAR HANDLE STUD	1,1	
9	12	29245	WASHER, CENTER HANDLE STL	1,1	
10	12	20346	WASHER, LOWER HANDLE STU	1,1	
11	11	21825	NUT, CENTER AND LOWER HAN	1,1	
12	10	29199	SCREW, CENTER - HANDLE TO	1,1	
13	14	20165	TAB WASHER, SHEAVE SHAFT N	1,1	
14	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1,1	
15		28967	SCREEN, VENT - TOP COWL	1,1	
16	10	29221	SCREW, VENT SCREEN TO TOP	4,4	
17	177	2355A 3	TOP COWL ASSEMBLY	1,1	
18	16	20500	STUD, REAR - TOP COWL TO CO	2,2	
19	16	20353	STUD, FRONT - TOP COWL TO C	2,2	
20	25	20116	GROMMET, CHOKE KNOB	1,1	
21	23	20326	SPACER, TOP COWL STUD	2,2	
22	12	20028	WASHER, TOP COWL STUD (1/1	4,4	
23	12	20346	WASHER, TOP COWL STUD (3/4	4,4	
24	12	20583	WASHER, TOP COWL STUD (1/3	OPT,01	
25	11	20361	NUT, TOP COWL FASTENING ST	4,4	
26		20155	RETAINER, STARTER SPRING	1,1	
27	24	29340A 1	SPRING, STARTER REWINDING	1,1	
28	23	28912	BUSHING, SPRING GUIDE	1,1	
29	50	30994	SHEAVE ASSEMBLY	1,1	
30		30596	PAWL, STARTER	3,3	
31	13	30597	WASHER, WAVE - STARTER PAW	3,3	
32	23	28919	BUSHING, NYLON - SHEAVE SHA	1,1	
33	23	28911	SPACER, SHEAVE SHAFT	1,1	
34		26179	RETAINER, WAVE WASHER	1,1	
35	12	26180	WASHER, WAVE WASHER RETA	1,1	
35	13	20160	WASHER, WAVE - RETAINER TE	1,1	
37		30595	PLATE, RETAINER - STARTER P	1,1	
38		28913	SHAFT, SHEAVE	1,1	
39		35391A 1	TRIM MOULDING ASSEMBLY, TC	1,1	
40		34433	BRACKET, TENSION - TRIM MOU	1,1	
41	12	24424	WASHER, BRACKET FASTENING	1,1	