



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1		
2	12	33001	WASHER, FLYWHEEL NUT	1,1		
3	28	20094	KEY, FLYWHEEL DRIVE	1,1		
4	208	1996A 1	FLYWHEEL ASSEMBLY	1,		
4	223	2402A 1	FLYWHEEL ASSEMBLY	1,		3
5	215	2026A 2	FLYWHEEL ASSEMBLY	,1		
5	223	2403A 2	FLYWHEEL ASSEMBLY	,1		4
6		29788	FLANGE, FLYWHEEL PULLEY	1,1		
7		30306	PULLEY, FLYWHEEL	1,1		
8	17	26618	DOWEL PIN, PULLEY TO FLYWH	1,1		
9		29787	HUB, FLANGE - FLYWHEEL PULL	1,1		
-	10	26774	SCREW, FLEX PLATE TO FLYWH	8,8		3,4
-	50	35817	RATCHET, FLYWHEEL - FLEX PL	1,1		3,4
-	10	32417	SCREW, PLATE AND RATCHET	8,8		3,4
10	398	2085	STATOR, ALTERNATOR - FLYWF	,1		
10	398	2171	STATOR, ALTERNATOR - FLYWF	,1		4
11	10	32614	SCREW, STATOR TO UPPER EN	,4		
12	54	24836	CLAMP, STATOR LEAD TO CRAN	,1		
13		22789	"D" WASHER, STATOR LEAD CL	,1		
14	10	30009	SCREW, STATOR LEAD CLAMP F	,1		