



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1626	2040A 3	GEAR HOUSING ASSEMBLY, COM	1,1	
1	1626	2040A 1	GEAR HOUSING ASSEMBLY	1,1	
2	16	32027	STUD, WATER PUMP BODY	3,3	
3	16	32017	STUD, GEAR HOUSING TO D	2,2	
4	31	20231	BEARING, ROLLER - DRIVE S	1,1	
5		32008	SHAFT, SHIFT - LOWER	1,1	
6	18	20233	CLIP, RETAINING - SHIFT SHAF	1,1	
7	25	25439	"O" RING, SHIFT SHAFT BUSHI	1,1	
8	23	28374A 1	BUSHING ASSEMBLY, SHIFT SI	1,1	
9	26	31249	OIL SEAL, SHIFT SHAFT BUSHI	1,1	
10		25138	CAM, LOWER - REVERSE LOCK	1,1	
11		29823	CAM, UPPER - REVERSE LOCK	1,1	
12	45	31996	DRIVE SHAFT (STANDARD)	1,1	
13	15	20929A 1	SHIM, BEARING TO GEAR HOU	AR,AR	
14		20861	BEARING, BALL - DRIVE SHAFT	1,1	
15	53	29116	RING, SNAP - BALL BEARING R	1,1	
16	15	20929A 1	SHIM, BEARING TO WATER PL	AR,AR	
17	43	20834	GEAR, PINION - DRIVE SHAFT	1,1	
18	14	29163	TAB WASHER, PINION GEAR F	1,1	
19	10	20925	SCREW, PINION GEAR TO DRIP	1,1	
20	27	32771	GASKET, WATER PUMP BASE	1,1	
21	25	26855	"O" RING, WATER PUMP BASE	1,1	
22	46	32766A 1	WATER PUMP BASE ASSEMBL	1,1	
23	26	23300	OIL SEAL, WATER PUMP BAS	1,1	
24	17	29596	DOWEL PIN, WATER PUMP E	2,2	
25	27	32769	GASKET, LOWER - WATER PUI	1,1	
26		32768	PLTE, FACE - WATER PUMP BA	1,1	
27	27	32770	GASKET, UPPER - FACE PLATE	1,1	
28	47	20268	IMPELLER, WATER PUMP	1,1	
29	17	23733	PIN, IMPELLER DRIVE	1,1	
30	46	32767A 1	WATER PUMP BODY ASSEMBL	1,1	
31		32001	INSERT, WATER PUMP BODY	1,1	
32	26	32121	OIL SEAL, WATER PUMP BODY	1,1	
33	13	26992	LOCKWASHER, WATER PUMP	3,3	
34	11	29598	NAT, WATER PUMP BODY ANC	3,3	
35	26	25192	SEAL, WATER PUMP BODY TO	1,1	
36	25	20273	RING, RUBBER - CENTRIFUGAL	1,1	
37	25	29619	"O" RING, UPPER - DRIVE SHA	1,1	
38	10	29608	SCREW, GEAR HOUSING FLUS	1,1	
39	27	29586	GASKET, GEAR HOUSING FLUS	1,1	
40	26	29612	SEAL HOUSING FLUSHING HO	1,1	