



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	2040A 3	GEAR HOUSING ASSEMBLY, CO	1,1		
1	1626	2040A 1	GEAR HOUSING ASSEMBLY (SI	1,1		
43		30147	CAM, SHIFT	1,1		
44		20930	FOLLOWER, CAM	1,1		
45		20843	SLIDE, CROSS PIN	1,1		
46	24	20254	SPRING, COMPRESSION - CAM	1,1		
47	15	31154A 1	SHIM, BEARING CUP TO GEAR	AR,AR		
48	43	20975	FORWARD GEAR ASSEMBLY	1,1		
49	31	20249	BEARING,ROLLER - FORWAR	1,1		
50	31	31215A 1	TAPERED ROLLER BEARING	1,1		
51	31	31216	CUP, TAPERED ROLLER BE	1,1		
52	52	32189	RATCHET, SLIDING CLUTCH	1,1		
53	17	20841	PIN, CROSS - RATCHET TO PR	1,1		
54	53	20842	RING, RETINING - CROSS PIN	1,1		
55	44	32000	SHAFT, PROPELLER	1,1		
56	43	20975	REVERSE GEAR ASSEMBLY	1,1		
57	12	32004	WASHER, THRUST - REVERSE	1,1		
58	30	20839	BEARING, BALL - REVERSE C	1,1		
59	15	20927A 1	SHIM, THRUST WASHER TO G	AR,AR		
60	25	31986	"O" RING, BEARING CARRIER	1,1		
61		32015A 1	BEARING CARRIER ASSEMBLY	1,1		
62	31	20249	BEARING, ROLLER - BEARING	1,1		
63	26	23300	OIL SEAL, BEARING CARRIER	1,1		
64	28	30281	KEY, LOCATING - BEARING CARF	1,1		
65	12	31993	WASHER, GEAR HOUSING COVE	1,1		
66		32014	COVER, GEAR HOUSING	1,1		
67	12	25251	WASHER, BACKING - PROPELLE	1,1		
68		32002A 1	THRUST HUB AND WASHER AS	1,1		
69	12	31992	WASHER, CUPPED - THRUST H	1,1		
70	12	32007	WASHER, SPLINED - PROPELLE	1,1		
71	11	31990	NUT, PROPELLER	1,1		
72		31640	TRIM TAB, GEAR HOUSING	1,1		
73	10	32470	SCREW, TRIM TAB TO GEAR HO	1,1		
74	11	22178	NUT, DRIVE SHAFT HOUSING TC	1,1		
75	11	23161	NUT, DRIVE SHAFT HOUSING TC	1,1		