



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	394	2271A 2	MAGNETO ASSEMBLY, COMPLE	1,1		
1	394	1570	FRAME, MAGNETO HOUSING	1,1		
2	10	25510	SCREW, SET - COIL BRIDGE	2,2		
3	394	1051	LOCKWIRE, COIL BRIDGE SET S	1,1		
4	30	24998	BEARING, BALL (DRIVE END)	1,1		
5	394	1067A 1	MAGNETIC ROTOR AND SHAFT	1,1		
6	30	49090	BEARING, BALL (OPPOSITE DRIV	1,1		
7	394	1637	SUPPORT, BALL BEARING	1,1		
8	10	25509	SCREW AND LOCKWASHER, SU	3,3		
9	84	60466A13	WIRE ASSEMBLY, PRIMARY G R	1,1		
10	10	29182	SCREW, PRIMARY GROUND (#1)	1,1		
11	12	30267	WASHER, PRIMARY GROUND TE	1,1		
12	394	1579	INSULATOR, PRIMARY GROUND	1,1		
13	12	29099	WASHER, INSULATING - PRIMAF	1,1		
14	23	62769	BUSHING, INSULATING - HOUSIN	1,1		
15	12	26014	WASHER, PRIMARY GROUND SI	1,1		
16	11	24656	NUT, LOCK - PRIMARY GROUND	1,1		
17	11	68219	NUT, PRIMARY GROUND SCREW	1,1		
18	394	1128A 1	COIL ASSEMBLY	1,1		
19	394	1050	CLIP, COIL - HIGH TENSION	1,1		
20	13	23836	LOCKWASHER, COIL TERMINAL	1,1		
21	394	1131	NUT, COIL CLIP FASTENING	1,1		
22	393	1504A10	BREAKER ASSEMBLY	1,1		
23	393	1586	GROMMET, PLASTIC - BREAKER	1,1		
24	16	29230	STUD, PRIMARY LEAD AND TEN	1,1		
25	11	29236	NUT, PRIMARY LEAD FASTENINI	1,1		
26	394	1106A 1	HOLDER AND CAM WICK ASSEM	1,1		
27	12	26439	WASHER, BREAKER PIVOT PIN	1,1		
28	18	26953	COTTER PIN, BREAKER TO PIVO	1,1		
29	10	20597	SCREW, BREAKER HOLDER TO	1,1		
30	394	1130A 1	CONDENSER	1,1		
31	10	25509	SCREW AND LOCKWASHER, CO	1,1		
32	27	29166	GASKET, MAGNETO COVER	1,1		
33	394	1577A 2	COVER, MAGNETO	1,1		
34	10	29418	SCREW, COVER TO FRAME	4,4		
35	14	29157	TAB WASHER, COVER FASTENIN	4,4		
36	394	2602A 1	MAGNETO ROTOR SASEMBLY	1,1		
37	394	1110	CLIP, SPRING	1,1		
38	27	25725	GASKET, END CAP COVER	1,1		
39	394	1561A 2	END CAP COVER ASSEMBLY	1,1		
40	394	1066A 1	BRUSH AND SPRING ASSEMBLY	1,1		