



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	2470A 3	GEAR HOUSING ASSEMBLY, CO	1,1,,		
-	1626	2470A 4	GEAR HOUSING ASSEMBLY, CO	1,1,,		
-	1626	2470A18	GEAR HOUSING ASSEMBLY, CO	1,1,1		
-	1626	2470A19	GEAR HOUSING ASSEMBLY, CO	1,1,1		
1	1626	2470A 1	GEAR HOUSING ASSEMBLY S	1,1,,		
1	1626	2470A16	GEAR HOUSING ASSEMBLY SE	1,1,1		
49		31640	TRIM TAB, GEAR HOUSING	1,1,1,1		
50	10	32470	SCREW, TRIM TAB TO GEAR H	1,1,1,1		
51		36288	CAM, SHIFT	1,1,1,1		
52		20930	FOLLOWER, CAM	1,1,,		
52		38441	FOLLOWER, CAM	1,1,1		
53		20843	SLIDE, CROSS PIN	1,1,1,1		
54	24	20254	SPRING, COMPRESSION - CAM	1,1,,		
54	24	39845	SPRING, COMPRESSION - CAM	1,1,1		
55	15	31154A 1	SHIM, BEARING CUP TO GEAR	AR,AR,		
--	43	39941A 1	FORWARD GEAR ASSEMBLY, CC	1,1,1		
56	43	20975	FORWARD GEAR ASSEMBLY	1,1,,		
56	43	39941	FORWARD GEAR ASSEMBLY	1,1,1		
57	31	20249	BEARING, ROLLER - FORWAR	1,1,1,1		
58	31	31215A 1	TAPERED ROLLER BEARING	1,1,1,1		
59	31	31216	CUP, TAPERED ROLLER BE	1,1,1,1		
60	52	32189	RATCHET, SLIDING CLUTCH	1,1,,		
60	52	38128	RATCHET, SLIDING CLUTCH	1,1,1		
61	17	20841	PIN, CROSS - RATCHET TO PR	1,1,,		
61	17	38113	PIN, CROSS - RATCHET TO PR	1,1,1		
62	53	20842	RING, RETAINING - CROSS PIN	1,1,,		
62	24	38114	SPRING, RETAINING - CROSS P	1,1,1		
63	44	32000	SHAFT, PROPELLER	1,1,,		
63	44	38127	SHAFT, PROPELLER	1,1,1		
--	43	39942A 1	REVERSE GEAR ASSEMBLY, C	1,1,1		
64	43	20975	REVERSE GEAR ASSEMBLY	1,1,,		
64	43	39942	REVERSE GEAR ASSEMBLY	1,1,1		
65	12	32004	WASHER, THRUST - REVERSE	1,1,1,1		
66	30	20839	BEARING, BALL - REVERSE C	1,1,1,1		
67	15	20927A 1	SHIM, THRUST WASHER TO G	AR,AR,		
68	25	31986	"O" RING, BEARING CARRIER	1,1,1,1		
69		32015A 1	BEARING CARRIER ASSEMBLY	1,1,,	SERIAL 00000000-#1811268	
70	31	20249	BEARING, ROLLER - BEARIN	1,1,,	SERIAL 00000000-#1811268	
71	26	23300	OIL SEAL, BEARING CARRIER	1,1,,	SERIAL 00000000-#1811268	
69		38130A 1	BEARING CARRIER ASSEMBLY	1,1,1,1	SERIAL 01811269-09999999	
70	31	20249	BEARING, ROLLER - BEARIN	1,1,1,1	SERIAL 01811269-09999999	