



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY	1,1,1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2,2,2		
3	21	30430	VALVE, CHECK	2,2,2,2		
4		23004	RETAINER, CHECK VALVE	1,1,1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2,2,2		
6	27	24863	GASKET, FUEL PUMP	2,2,2,2		
7		23014A 1	DIAPHRAGM, FUEL PUMP	1,1,1,1		
8		23008	COVER, FUEL PUMP	1,1,1,1		
9	27	30276	GASKET, FUEL PUMP COVER	1,1,1,1		
10	10	30274	SCREW, FUEL PUMP MOUNTING	2,2,2,2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	1,1,1,1		
12	22	24949	CONNECTOR, PUMP INLET TO F	1,1,1,1		
13	22	22946	SLEEVE, RUBBER - CONNECTOF	1,1,1,1		
14	11	22948	NUT, CONNECTOR TO FUEL LINI	1,1,1,1		
15	32	32094	FUEL LINE, PUMP TO LOWER AN	1,1,1,1		
16	22	22995	ELBOW, FUEL PUMP INLET	1,1,1,1		
17	22	22946	SLEEVE, RUBBER	1,1,1,1		
18	11	22948	NUT, ELBOW	1,1,1,1		
19	32	30036	FUEL LINE, FUEL PUMP TO ADAF	1,1,1,1		
20	22	37682	CONNECTOR, FUEL LINE TO ADA	1,1,1		
21		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1,1		
22		30187	STEM, CHECK UNIT ADAPTOR	1,1,1,1		
23	25	20415	"O" RING, ADAPTOR STEM	1,1,1,1		
24	24	30189	SPRING, ADAPTOR STEM	1,1,1,1		
25		30188	CUP WASHER, ADAPTOR	1,1,1,1		
26	10	37990	SCREW, ADAPTOR TO BOTTOM	2,2,2,2		
26	10	21937	SCREW, ADAPTOR TO BOTTOM	2,2,2		
27	11	20184	NUT, ADAPTOR SCREW	2,2,2,2		