



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32970	RECTIFIER ASSEMBLY	1,1		
2	13	26993	LOCKWASHER, RECTIFIER MO	1,1		
3	11	21929	NUT, RECTIFIER MOUNTING S	1,1		
4	32	28373	SLEEVE, RECTIFIER LEADS	3,3		
5	10	29852	SCREW, HARNESS AND STATOF	3,3		
6	11	29488	NUT, HANRESS AND STATOR LE	3,3		
7		30212	TERMINAL BLOCK	1,1		
8	10	28192	SCREW, TERMINAL BLOCK TO C	2,2		
9	10	30663	SCREW, WIRING HARNESS LEA	1,1		
10	50	37345A	STARTER MOTOR ASSEMBLY	1,	SERIAL 00000000-01857029	
10	50	38890A	STARTER MOTOR ASSEMBLY	1,1	SERIAL 01857030-09999999	
11	10	22698	SCREW, STARTER MOTOR TO C	2,2		
12	13	26993	LOCKWASHER, STARTER MOTO	2,2		
13		25596	WIRE, STARTER MOTOR TO STA	1,1		
14	10	29197	SCREW, GROUND WIRE TO STA	1,1		
15	13	26992	LOCKWASHER, GROUND WIRE I	1,1		
--	11	20890	NUT, GROUND WIRE SCREW	1,1		
16		28016A	GROUND STRAP ASSEMBLY	1,1		
17		32445	STARTER SOLENOID	1,1		
18	13	26996	LOCKWASHER, SOLENOID TERM	2,2		
19	11	20645	NUT, SOLENOID TERMINAL (#10	2,2		
20	13	26993	LOCKWASHER, SOLENOID TERM	2,2		
21	11	20083	NUT, SOLENOID TERMINAL - INE	1,1		
22	11	26062	NUT, CAP - SOLENOID TERMINA	1,1		
23	10	31208	SCREW, STARTER SOLENOID TI	2,2		
24		38072	WIRING HARNESS (INTERNAL)	1,1		
25		26079	PLATE, BACKING - WIRING HARN	1,1		
26	10	26128	SCREW, BACKING PLATE TO BO	4,4		
27	24	28975	SPRING, GARTER - INTERNAL W	1,1		
28	54	22783	"S" CLIP, WIRING HARNESSSS LE	2,2		