



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2116	2990A 1	BOTTO COWL ASSEMBLY	1,1		
2		29206	COVER, PLUG - BOTTOM COWL	1,		3
3	10	26128	SCREW, PLUG COVER TO BOT	4,		3
4	13	26995	LOCKWASHER, PLUG COVER S	4,		3
5	11	26419	NUT, PLUG COVER SCREW	4,		3
6	16	20467	STUD, BOTTOM COWL TO REA	4,4		
7	11	20361	NUT, BOTTOM COWL STUD	4,4		
8	32	29164	TUBE, VENT - MAGNETO OUTLE	1,		
8	32	26955	TUBE, VENT - MAGNETO OUTLE	1,		
8	32	26338	TUBE, VENT - MAGNETO OUTLE	2,		
9	22	31521	ELBOW, MAGNETO VENT TUBE	2,2		
10		21104A 2	CONNECTOR BASE ASSEMBLY	1,		
11	13	21972	LOCKWASHER, CONNECTOR E	1,		
12	11	21971	NUT, CONNECTOR BASE TO BI	1,		
13	54	25231	CLIP, CONNECTOR BASE LEAD V	1,		
14	10	22815	SCREW, LEAD WIRE CLIP TO BO	1,		
15		37943A 1	COVER PLATE ASSEMBLY	1,1		
16		37944	PAD, SOUND - COVER PLATE	1,1		
17	10	30009	SCREW, COVER PLATE TO BOT	3,3		
18		37695	BOOT, CONTROL CABLE	1,1		
19		23760	BAFFLE, BOTTOM COWL	1,1		
20	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3		
21		37637	BOOT, FUEL CONNECTOR	1,1		
22		37692	SUPPORT, EXTERNAL WIRING F	1,		
23	10	21937	SCREW, HARNESS SUPPORT TC	2,		
24	11	46887	NUT, HARNESS SUPPORT SCRE	2,		
25	32	26407	HOSE, WATER TELL TALE - CYLI	1,1		
26	22	29111	CONNECTOR, WATER TELL TAL	1,1		
27	54	22976	CLAMP, WATER TELL TALE HOS	2,2		
28		37686A 3	PLATE ASSEMBLY, EXHAUST EX	1,1		
29	12	38453	WASHER, NYLON - WATER INL	1,1		
30	26	38452	SEAL, RUBBER - WATER TUBE	1,1		4
31		38500	REATINER - WATER TUBE SEA	1,1		
32	10	34439	SCREW, RETAINER TO EXHAU	1,1		
33	10	22421	SCREW, EXHAUST EXTENSION I	1,1		
34	11	46887	NUT, EXHAUST EXTENSION PLA	1,1		
35		37924	LEVER, QUICK DISCONNECT - TH	2,2		
36	24	38005	SPRING, COMPRESSION - QUICK	2,2		
37	23	37927	BEARING, NYLON - QUICK DISCC	2,2		
38	17	23928	PIN, ROLL - QUICK DISCONNECT	2,2		
39		27926	RETAINER, NYLON BEARING TO	1,1		