



SEE PAGE 21 FOR DRIVE SHAFT
 AND COMPONENT PARTS

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	2470A18	GEAR HOUSING ASSEMBLY, CO	1,1		
-	1626	2470A20	GEAR HOUSING ASSEMBLY, CO	1,1		
1	1626	2470A16	GEAR HOUSING ASSEMBLY (SI	1,1		
49		31640	TRIM TAB, GEAR HOUSING	1,1		
50	10	32470	SCREW, TRIM TAB TO GEAR H	1,1		
51		36288	CAM, SHIFT	1,1		
52		38441	FOLLOWER, CAM	1,1		
53		20843	SLIDE, CROSS PIN	1,1		
54	24	39845	SPRING, COMPRESSION - CAM	1,1		
55	15	31154A 1	SHIM, BEARING CUP TO GEAR	AR,AR		
56	43	39941	FORWARD GEAR ASSEMBLY	1,1		
57	31	20249	BEARING, ROLLER - FORWAR	1,1		
58	31	31215A 1	TAPERED ROLLER BEARING	1,1		
59	31	31216	CUP, TAPERED ROLLER BE	1,1		
60	52	47586	RATCHET, SLIDING CLUTCH	1,1		
61	17	38113	PIN, CROSS - RATCHET TO PR	1,1		
62	24	38114	SPRING, RETAINING - CROSS	1,1		
63	44	38127	SHAFT, PROPELLER	1,1		
64	43	39942	REVERSE GEAR ASSEMBLY	1,1		
65	12	32004	WASHER, THRUST - REVERSE	1,1		
66	30	20839	BEARING, BALL - REVERSE G	1,1		
67	15	20927A 1	SHIM, THRUST WASHER TO G	AR,AR		
68	25	31986	"O" RING, BEARING CARRIER	1,1		4
69		38130A 1	BEARING CARRIER ASSEMBLY	1,1		
70	31	20249	BEARING, ROLLER - BEARIN	1,1		
71	26	23300	OIL SEAL, BEARING CARRIER	1,1		
71	26	23517	OIL SEAL, BEARING CARRIER	1,1		
72	28	30281	KEY, LOCATING - BEARING CA	1,1		
73	12	31993	WASHER, GAER HOUSING COV	1,1		
74		32014	COVER, GEAR HOUSING	1,1		
75	12	45175	WASHER, DRIVE SHAFT HOUS	1,1		
76	11	20509	NUT, DRIVE SHAFT HOUSING	1,1		
77	12	45176	WASHER, DRIVE SHAFT HOUS	2,2		
78	11	22178	NUT, DRIVE SHAFT HOUSING TC	1,1		
79		38859A 1	THRUST HUB AND WASHER AS	1,1		
80	12	31992	WASHER, CUPPED - THRUST	1,1		
81	12	32007	WASHER, SPLINED - PROPELLER	1,1		
82	11	31990	NUT, PROPELLER	1,1		