



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A	FUEL PUMP ASSEMBLY	1,1		
2	21	30430A	CHECK VALVE ASSEMBLY	1,1		
3		23014A	DIAPHRAGM KIT	1,1		4
4			GASKET, CHECK VALVE TO	2,2		4
5			GASKET, FUEL PUMP	2,2		4
6			GASKET, FUEL PUMP COVE	1,1		4
7		23004	RETAINER, CHECK VALVE	1,1		
8	10	20037	SCREW, RETAINER TO HOUSI	2,2		
9		23008	COVER, FUEL PUMP	1,1		
10	10	30274	SCREW, FUEL PUMP MOUNTING	2,2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	1,1		
12	22	22949	CONNECTOR, PUMP INLET TO F	1,1		
13	22	22946	SLEEVE, RUBBER - CONNECTOF	1,1		
14	11	22948	NUT, CONNECTOR TO FUEL LINI	1,1		
15	32	32094	FUEL LINE, PUMP TO LOWER AN	1,1		
16	22	22995	ELBOW, FUEL PUMP INLET	1,1		
17	22	22946	SLEEVE, RUBBER	1,1		
18	11	22948	NUT, ELBOW	1,1		
19	32	30036	FUEL LINE, FUEL PUMP TO ADAF	1,1		
20	22	37682	CONNECTOR, FUEL LINE TO ADA	,1		
21		30186	ADAPTTOR, CHECK UNIT (FUEL	1,1		
22		30187	STEM, CHECK UNIT ADAPTOR	1,1		
23	25	20415	"O" RING, ADAPTOR STEM	1,1		
24	24	30189	SPRING, ADAPTOR STEM	1,1		
25		30188	CUP WASHER, ADAPTOR	1,1		
26	10	37990	SCREW, ADAPTOR TO BOTTOM	2,		
26	10	21937	SCREW, ADAPTOR TO BOTTOM	,2		
27	11	46887	NUT, ADAPTOR SCREW	2,2		