



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	394	2271A 2	MAGNETO ASSEMBLY, COMPLE	1	
1	394	1570	FRAME, MAGNETO HOUSING	1	
2	10	25510	SCREW, SET - COIL BRIDGE	2	
3	394	1051	LOCKWIRE, COIL BRIDGE SET	1	
4	30	24998	BEARING, BALL (DRIVE END)	1	
5	394	1067	MAGNETIC ROTOR AND SHAF	1	
6	30	24997	BEARING, BALL (OPPOSITE DR	1	
7	394	1637	SUPPORT, BALL BEARING	1	
8	10	25509	SCREW AND LOCKWASHER, S	3	
9	394	1053A 1	WIRE ASSEMBLY, PRIMARY GF	1	
10	10	29182	SCREW, PRIMARY GROUND (H	1	
11	12	30267	WASHER, PRIMARY GROUND	1	
12	394	1579	INSULATOR, PRIMARY GROUN	1	
13	12	29099	WASHER, INSULATING - PRIM	1	
14	23	29101	BUSHING , INSULATING - HOU	1	
15	12	26014	WASHER, PRIMARY GROUND	1	
16	11	24656	NUT, LOCK - PRIMARY GROUN	1	
17	11	20645	NUT, PRIMARY GROUND SCRE	1	
18	394	1128A 1	COIL ASSEMBLY	1	
19	394	1050	CLIP, COIL - HIGH TENSION	1	
20	13	23836	LOCKWASHER, COIL TERMIN	1	
21	394	1131	NUT, COIL CLIP FASTENING	1	
22	393	1504A 6	BREAKER ASSEMBLY	1	
23	393	1586	GROMMET, PLASTIC - BREAK	1	
24	16	29230	STUD, PRIMARY LEAD AND	1	
25	11	29236	NUT, PRIMARY LEAD FASTEN	1	
26	394	1106A 1	HOLDER AND CAM WICK ASE	1	
27	53	21058	"E" RING, BREAKER TO PIVO	1	
28	10	20597	SCREW, BREAKER HOLDER	1	
29	394	1130	CONDENSER	1	
30	10	25509	SCRWE AND LOCKWASHER, C	1	
31	27	29166	GASKET, MAGNETO COVER	1	4
32	394	1577	COVER, MAGNETO	1	
33	10	29418	SCREW, COVER TO FRAME	4	
34	14	38359	TAB WASHER, COVER FASTEN	4	
35	394	2602A 1	MAGNETO ROTOR ASSEMBLY	1	
36	394	1110	CLIP, SPRING	1	
37	27	25725	GASKET, END CAP COVER	1	4
38	394	1561A 2	END CAP COVER ASSEMBLY	1	
39	394	1056A 1	BRUSH AND SPRING ASSEM	1	
40	10	25517	SCREW, HIGH TENSION CAP	4	