



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A 3	SWITCH BOX ASSEMBLY, COMPI	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	7		
3	11	45076	NUT, SWITCH BOX TERMINAL	7		
4	10	22485	SCREW, SWITCH BOX TO FRON	4		
5	11	46887	NUT, SWITCH BOX TO FRONT SI	4		
6	332	2910A 3	RECTIFIER ASSEMBLY, COMPLE	1		
7	12	45075	WASHER, RECTIFIER TERMINAL	3		
8	11	45076	NUT, RECTIFIER TERMINAL	3		
9		46286	JUMPER WIRE, RECTIFIER TO S'	1	SERIAL 00000000-02167843	
10	10	22485	SCREW, RECTIFIER TO FRONT E	2		
11	11	46887	NUT, RECTIFIER TO FRONT SUF	2		
12		46280	BRACKET, RETAINER - HIGH TEI	1		
13	10	21722	SCREW, RETAINER BRACKET TI	1		
14	11	46887	NUT, RETAINER BRACKET SCRE	1		
15	50	38890A 1	STARTER MOTOR ASSEMBLY	1		
16	10	22698	SCREW, STARTER MOTOR TO C	2		
17	13	26993	LOCKWASHER, STARTER MOTO	2		
18		25596	WIRE, STARTER MOTOR TO STA	2		
19	10	29197	SCREW, GROUND WIRE TO STA	1		
20	13	26992	LOCKWASHER, GROUND WIRE I	1		
--	11	20890	NUT, GROUND WIRE SCREW	1		
21		46287	GROUND STRAP ASSEMBLY	1		
22		32445	STARTER SOLENOID	1		
23	13	26996	LOCKWASHER, SOLENOID TERM	2		
24	11	20645	NUT, SOLENOID TERMINAL (#10	2		
25	13	26993	LOCKWASHER, SOLENOID TERM	2		
26	11	20083	NUT, SOLENOID TERMINAL - INE	1		
27	11	26062	NUT, CAP - SOLENOID TERMINA	1		
28	10	31208	SCREW, STARTER SOLENOID TI	2		
29		46285	WIRING HARNESS (INTERNAL) -	1	SERIAL 00000000-02167843	
29		46305	WIRING HARNESS (INTERNAL) -	1	SERIAL 02167844-09999999	
29		38072	WIRING HARNESS (INTERNAL) -	1		
30	24	28975	SPRING, GARTER - INTERNAL w	1		
31		26079	PLATE, BACKING - WIRING HAR	1		
32	10	26128	SCREW, BACKING PLATE TO BO	4		
33	10	20776	SCREW, WIRING HARNESS LEA	1		
34	13	24669	LOCKWASHER, WIRING HARNE	1		
35	54	26550	CLIP, WIRING HARNESS LEAD	2		
36	10	29072	SCREW, WIRING HARNESS LEA	2		
37		27789	"D" WASHER, WIRING HARNE	2		
38	11	24666	NUT, WIRING HARNESS LEAD C	2		