



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1440	3290A 1	CLAMP BRACKET ASSEMBLY	2,2,2,2		
2		28403A 3	THUMB SCREW ASSEMBLY	2,2,2,2		
3	12	28404	WASHER, THUMB SCREW	2,2,2,2		
4		30664	TUBE, TILT - CLAMP BRACKET T	1,1,1,1		
5	15	30497A 1	SHIM, CLAMP BRACKET TO SWI	2,2,		
5	12	52864	WASHER, CLAMP BRACKET TO S	,,2,2		
6		30499	NUT, TILT TUBE FASTENING	2,2,2,2		
7		30498	CAP, PLASTIC - TILT TUBE ENDS	2,2,		
7		53078	CAP, PLASTIC - TILT TUBE ENDS	,,2,2		
8	16	20221	STUD, CLAMP BRACKET	1,1,1,1		
9	23	20222	SPACER, CLAMP BRACKET STUC	1,1,1,1		
10	13	26993	LOCKWASHER, CLAMP BRACKET	2,2,2,2		
11	11	20083	NUT, STUD TO CLAMP BRACKET	2,2,2,2		
12	17	49930A 1	TILT LOCK PIN ASSEMBLY	1,1,1,1		
13		39015A 4	REVERSE LOCK ASSEMBLY	1,1,1,1		
14	18	45882	COTTER PIN, REVESE LOCK TO	1,1,1,1		
15		20208	SHAFT, REVERSE LOCK TO SWP	1,1,1,1		
16	24	29821	SPRING, TENSION - REVERSE L	1,1,1,1		
17	17	25598	ROLL PIN, REVERSE LOCK SPRI	1,1,1,1		
18	1442	3231A 1	SWIVEL BRACKET ASSEMBLY (S	1,1,1,1		
18	1442	3233A 1	SWIVEL BRACKET ASSEMBLY (L	1,1,1,1		
19	26	32911	OIL SEAL, SWIVEL BRACKET	2,2,2,2		
20	22	23612	FITTING, GREASE - SWIVEL BF	1,1,1,1		
21		53216	LUBRICAP, SWIVEL BRACKET Gf	1,1,1,1		
22	38	39784	SERIAL PLATE	1,1,1,1		
23	10	25612	SCREW, DRIVE - SERIAL PLATE	4,4,4,4		
24		39445A 1	SWIVEL PIN AND STEERING ARM	1,1,,		
24		39445A 2	SWIVEL PIN AND STEERING ARM	1,1,,		
24		52882A 1	SWIVEL PIN AND STEERING ARM	,,1,1		
24		52882A 2	SWIVEL PIN AND STEERING ARM	,,1,1		
25		30711	BUMPER, STEERING ARM	1,1,1,1		
26	10	33986	BOLT, UPPER MOUNT OT SWIVE	2,2,2,2		
27	12	47606	WASHER, SWIVEL PIN	1,1,1,1		
28		39503	BRACKET, RIDE GUIDE ATTACHI	1,1,1,1		
29	16	39781	STUD, RIDE GUIDE BRACKET TC	2,2,2,2		
30	11	20509	NUT, RIDE GUIDE BRACKET STL	2,2,2,2		
31	10	31830	SCREW, STEERING ARM TO RID	1,1,1,1		
32	11	20509	NUT, STEERING ARM SCREW	1,1,1,1		
33		47912A 1	LEVER ASSEMBLY, TILT STOP -	1,1,1,1		
34		47913A 1	LEVER ASSEMBLY, TILT LOCK - f	1,1,1,1		
35	10	47915	SCREW, TILT LOCK AND STOP	2,2,2,2		