



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	2799A19	DISTRIBUTOR ASSEMBLY, COM	1		
1	393	2799A21	HOUSING ASSEMBLY, PRIMAR	1		
2	13	26917	WASHER, WAVE - PRIMARY HO	2		
3	393	2795	SHIM, TRIGGER HOUSING TO I	AR		
4	393	2918A 3	TRIGGER HOUSING ASSEMBL	1		
5	53	45906	RING, RETAINER - ROTOR SHA	2		
6	30	26379	BEARING, BALL - ROTOR SHAF	2		
7	393	3269A 3	ROTOR SHAFT ASSEMBLY	1		
8	393	3014A 2	ADAPTOR ASSEMBLY, HOUSIN	1		
9	17	20032	DOWEL PIN, ADAPTOR TO PI	2		
10	27	46351	GASKET, ADAPTOR TO PRIM	1		
11	10	32627	SCREW, ADAPTOR TO HOUSIN	2		
12	11	46438	NUT, ADAPTOR TO HOUSING	2		
13	10	20646	SCREW, SHIM AND TRIGGER	2		
13	10	45218	SCREW, SHIM AND TRIGGER	2		
14	22	31521A 1	ELBOW ASSEMBLY, VENT HOSE	1		
15	27	36268	GASKET, DISTRIBUTOR CAP T	1		
16	393	2955A 2	DISTRIBUTOR CAP ASSEMBLY	1		
17	22	31521	ELBOW, VENT HOSE - DISTR	1		
18	393	1293A 1	BRUSH AND SPRING ASSEM	1		
19	10	45914	SCREW, DISTRIBUTOR CAP TO	4		
20	12	26436	WASHER, DISTRIBUTOR CAP	4		
21	11	46438	NUT, DISTRIBUTOR CAP FAST	4		
22	393	3294A 1	HIGH TENSION CABLE ASSEM	1		
--		20121	CONNECTOR, HIGH TENSION	1		
23	332	2854	BOOT, HIGH TENSION CABLE	1		
24	393	1275	SLEEVE, HIGH TENSION CAB	1		
25	25	26547	GROMMET, HIGH TENSION C	1		
26	32	46398	SLEEVE, HIGH TENSION CABLE	1		
27		47899A 9	SPARK PLUG ASSEMBLY ORDEI	4		
--		20121	CONNECTOR, SPARK PLUG L	4		
24	393	1275	SLEEVE, SPARK PLUG LEAD	4		
28		47604A 1	PROTECTOR, SPARK PLUG LE	4		
29	32	46768	SLEEVE (LEADS 1, 2, 3, 4) - 6"	2		
30	32	26527	SLEEVE, HIGH TENSION LEAD	2		