



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1626	3238A 4	GEAR HOUSING ASSEMBLY, COI	1,1,,		
-	1626	3238A 5	GEAR HOUSING ASSEMBLY, COI	1,1,,		
-	1626	3688A 4	GEAR HOUSING ASSEMBLY, COI	1,1,1		
-	1626	3688A 5	GEAR HOUSING ASSEMBLY, COI	1,1,1		
1	1626	3238A 1	GEAR HOUSING ASSY (ALUMI)	1,1,,		
1	1626	3502A 1	GEAR HOUSING ASSY (PLAST)	1,1,1		
1	1626	3688A 1	GEAR HOUSING ASSY (PLAST)	1,1,1		
56		54346	CAM, SHIFT	1,1,1,1		
57		38441	FOLLOWER, CAM	1,1,1,1		
58		20843	SLIDE, CROSS PIN	1,1,1,1		
59	24	39845	SPRING, COMPRESSION - CAM	1,1,1,1		
60	15	31154A 1	SHIM, BEARING CUP TO GEAR	AR,AR,		
60	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR,AR,		
61	31	31215A 1	TAPERED ROLLER BEARING A	1,1,1,1		
61	31	38356A 1	TAPERED ROLLER BEARING A	1,1,1		
61	31	20249	BEARING, ROLLER - FORWARD	1,1,1,1		
63	43	39941	FORWARD GEAR ASSEMBLY (S	1,1,1,1		
63	43	46372	FORWARD GEAR ASSEMBLY (S	1,1,1		
64	52	47586	RATCHET, SLIDING HUTCH	1,1,1,1		
65	17	38113	PIN, CROSS - RATCHET TO PR	1,1,1,1		
66	24	38114	SPRING, RETAINING - CROSS	1,1,1,1		
67	44	38127	SHAFT, PROPELLER	1,1,1,1		
68	43	39942	REVERSE GEAR ASSEMBLY (S	1,1,1,1		
68	43	46374	REVERSE GEAR ASSEMBLY (S	1,1,1		
69	15	20927A 1	SHIM, THRUST WASHER TO G	AR,AR,		
70	12	32004	WASHER, THRUST - REVERSE	1,1,1,1		
71	30	20839	BEARING, BALL - REVERSE GE	1,1,1,1		
72	25	31986	"O" RING, BEARING CARRIER	1,1,1,1		
73		38130A 1	BEARING CARRIER ASSEMBLY	1,1,,		
73		53014A 1	BEARING CARRIER ASSEMBLY	1,1,1		
74	31	20249	BEARING, ROLLER - BEARIN	1,1,1,1		
75	26	23300	OIL SEAL, BEARING CARRIER	1,1,1,1		
75	26	23517	OIL SEAL, BEARING CARRIER	1,1,1,1		
76	28	30281	KEY LOCATING - BEARING CAF	1,1,1,1		
77	12	31993	WASHER, GEAR HOUSING COV	1,1,,		
77	14	53012	TAB WASHER, GEAR HOUSING	1,1,1		
78		32014	COVER, GEAR HOUSING	1,1,,		
78		53013	COVER, GEAR HOUSING	1,1,1		
79		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1,1,1,1		
80	10	47580	SCREW, TRIM TAB TO GEAR H	1,1,1,1		
81	12	46375	WASHER, DRIVE SHAFT HOUS	1,1,1,1		