



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53156A 3	FUEL PUMP ASSEMBLY	1	UNITED STATES 2858814 THRL	
2	21	30430A 1	CHECK VALVE ASSEMBLY	1	UNITED STATES 2858814 THRL	
3		23014A 1	DIAPHRAGM KIT	1	UNITED STATES 2858814 THRL	2, 4
4			GASKET, CHECK VALVE TO	2	UNITED STATES 2858814 THRL	2, 4
5			GASKET, FUEL PUMP	2	UNITED STATES 2858814 THRL	2, 4
6			GASKET, FUEL PUMP COVE	1	UNITED STATES 2858814 THRL	2, 4
7		23004	RETAINER, CHECK VALVE	1	UNITED STATES 2858814 THRL	
8	10	20037	SCREW, RETAINER TO HOUSII	2	UNITED STATES 2858814 THRL	
9		23008	COVER, FUEL PUMP	1		
10	10	30273	SCREW, FUEL PUMP MOUNTING	2	UNITED STATES 2858814 THRL	
11	10	38036	SCREW, FUEL PUMP MOUNTING	1	UNITED STATES 2858814 THRL	
1		66777A 1	FUEL PUMP ASSEMBLY	1	UNITED STATES 3816308 AND I	0
2	21	30430A 1	CHECK VALVE ASSEMBLY	1	UNITED STATES 3816308 AND I	
3		23014A 1	DIAPHRAGM KIT	1	UNITED STATES 3816308 AND I	2, 4
4			GASKET, CHECK VALVE TO	2	UNITED STATES 3816308 AND I	2, 4
5			GASKET, FUEL PUMP	2	UNITED STATES 3816308 AND I	2, 4
6			GASKET, FUEL PUMP COVE	1	UNITED STATES 3816308 AND I	2, 4
7		23004	RETAINER, CHECK VALVE	1	UNITED STATES 3816308 AND I	
8	10	20037	SCREW, RETAINER TO HOUSII	2	UNITED STATES 3816308 AND I	
9		64710	COVER, FUEL PUMP	1	UNITED STATES 3816308 AND I	0
10	10	66944	SCREW, FUEL PUMP MOUNTIN	2	UNITED STATES 3816308 AND I	0
11	10	30173	SCREW, FUEL PUMP MOUNTIN	1	UNITED STATES 3816308 AND I	0
12	12	20128	WASHER, FUEL PUMP SCREW	3	UNITED STATES 3816308 AND I	
13	12	66553	WASHER, FUEL PUMP SCREW	3	UNITED STATES 3816308 AND I	
14	23	65790	BUSHING, FUEL PUMP SCREW	2	UNITED STATES 3816308 AND I	0
15	23	31915	SLEEVE, FUEL PUMP SCREW	1	UNITED STATES 3816308 AND I	0
16	22	22949	CONNECTOR, PUMP OUTLET TC	1		
17	22	22946	SLEEVE, RUBBER - CONNECTOF	1		
18	22	22948	NUT, CONNECTOR TO FUEL LINI	1		
19	32	32094	FUEL LINE, PUMP TO LOWER AN	1		
20	22	22995	ELBOW, FUEL PUMP INLET	1		
21	22	22946	SLEEVE, RUBBER	1		
22	22	22948	NUT, ELBOW	1		
23	32	30036	FUEL LINE, FUEL PUMP TO ADAF	1		
24	22	37682	CONNECTOR, FUEL LINE TO ADA	1		
25		30186	ADAPTOR, CHECK UNIT (FUEL LI	1		
26		30187	STEM, CHECK UNIT ADAPTOR	1		
27	25	20415	"O" RING, ADAPTOR STEM	1		2, 4
28	24	30189	SPRING, ADAPTOR STEM	1		
29		30188	CUP WASHER, ADAPTOR	1		
30	10	27990	SCREW, ADAPTOR TO BOTTOM	2		