



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	333	4674A 3	IGNITION DRIVER ASSEMBLY, CO	1	
1	333	4674A 4	HOUSING, IGNITION DRIVER	1	
2	10	47183	SCREW, SET - COIL ASSEMBLY	4	
3	333	3172A 1	TERMINAL BOARD ASSEMBLY,	1	
4	10	47182	SCREW, TERMINAL BOARD AS	1	
5	333	3175	COIL ASSEMBLY, IGNITION DR	1	
6	333	3176	COIL ASSEMBLY, IGNITION DR	1	
7	333	3173	HARNESS, PRIMARY CABLE - II	1	
8	54	47188	CLAMP, PRIMARY HARNESS C	1	
9	10	28259	SCREW, PRIMARY HARNESS C	3	
10	30	24998	BEARING, BALL - DRIVER END	1	
11	333	3198A 1	SHAFT ASSEMBLY, IGNITION C	1	
12	30	49090	BEARING, BALL - IGNITION DRI	1	
13	333	3166	CAP, BEARING - IGNITION DRI	1	
14	10	47194	SCREW, BEARING CAP FASTEN	3	
15	333	3143A 1	ROTOR ASSEMBLY, IGNITION I	1	
16	54	47187	SPRING, CLIP - IGNITION DR	1	
17	27	61031	GASKET, IGNITION DRIVER CO	1	4
18	333	4639A 1	COVER, IGNITION DRIVER	1	
19	10	47185	SCREW, IGNITION DRIVER CO	2	
20	14	29157	TAB WASHER, IGNITION DRIV	2	
21		58807A 1	FLAME ARRESTOR, IGNITION	2	
22	333	3142A 3	CAP ASSEMBLY, IGNITION DRI	1	
23	333	3165A 1	BRUSH AND SPRING ASSEM	1	
24	27	47190	GASKET, IGNITION DRIVER CA	1	4
25	394	1134A 2	GROUND STRAP ASSEMBLY	1	
26	10	47181	SCREW, IGNITION DRIVER CA	3	
26	10	47184	SCREW, IGNITION DRIVER CA	1	
27	14	29157	TAB WASHER, IGNITION DRIV	4	
28	393	250A 1	LEAD ASSEMBLY, HIGH TENSIO	1	
--		20121	TERMINAL, HIGH TENSION L	1	
--	393	1275	SLEEVE, HIGH TENSION LEA	1	
29	25	26547	GROMMET, COIL WIRE BRACKET	1	
30	332	2854	BOOT, HIGH TENSION LEAD	1	
31	84	63212A 2	SPARK PLUG LEAD ASSEMBLY	4	ORDER A-36549A1 KIT FOR REF
--		20121	CONNECTOR, SPARK PLUG L	4	
--	393	1275	SLEEVE, SPARK PLUG LEAD TI	4	
32	32	46768	SLEEVE, SPARK PLUG LEAD (6	2	
33	85	71006A 1	PROTECTOR ASSEMBLY, SPARK	4	
--		59126	SEPARATOR, IGNITION LEADS	1	
34	54	22627	CLIP, IGNITION DRIVER LEAD	1	