



			Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
2	14	61004	TAB WASHER, SHEAVE SHAFT N	1		
3		57237	HOUSING, STARTER	1		
4	10	32565	SCREW, STARTER HOUSING TO	3		
5	13	20202	LOCKWASHER, STARTER HOUS	3		
6		37691	PLATE, CABLE GUIDE	1		
7	10	35881	SCREW, DRIVE - CABLE GUIDE	3		
8		61002	RETAINER, STARTER SPRING	1		
9	24	39502A	SPRING, STARTER REWIND	1		
10	50	66855A	SHEAVE, ASSEMBLY	1		
11	23	63100	BUSHING, SPRING GUIDE	1		
12		30596	PAWL, STARTER	3		
13	13	36206	WASHER, WAVE - STARTER PA	3		
15	23	63061	SPACER, SHEAVE SHAFT	1		
16		39840	RETAINER, WAVE WASHER	1		
17	12	57837	WASHER, WAVE WASHER RETA	1		
18	13	20160	WASHER, WAVE - RETAINER TE	1		
19			SPRING, RETAINER PLATE TO S	1		
19A		66848	RETAINER, SPRING	2		
20		66845	PLATE, RETAINER - STARTER P	1		
21	12	57860	WASHER, WEAR - STARTER PA	1		
22		61003	SHAFT, SHEAVE	1		
23	50	28985A	STARTER CABLE ASSEMBLY	1		
23		47341A	STARTER CABLE (FOR MANUAL	1		
24		28747	HANDLE, STARTER CABLE	1		
25		28748	RETAINER, STARTER CABLE AN	1		
26		70969	CABLE ASSEMBLY INTERLOCK	1		0
27	10	32228	SCREW, INTERLOCK CABLE TO	1		
28	10	20100	SCREW, INTERLOCK CABLE TO	1		
29	13	27660	LOCKWASHER, INTERLOCK CAB	1		
30	12	26013	WASHER, INERLOCK CABLE SCF	2		
31		57236	CAM, SLIDING - STARTER HOUS	1		
32	24	70086	SPRING, SLIDING CAM	1		
33	12	37998	WASHER, INTERLOCK CABLE	1		
34	18	26953	COTTER PIN, INERLOCK CABLE	1		
35		65757A	TOGGLE ASSEMBLY, STARTER I	1		
36	10	57249	SCREW, TOGGLE TO STARTER I	1		
37	23	26856	BUSHING, TOGGLE SCREW	2		
38	24	57279	SPRING, TOGGLE SCREW	1		