



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	11	22339	NUT, FLYWHEEL	1	
2	12	68229	WASHER, FLYWHEEL NUT	1	
3	28	20094	KEYWHEEL DRIVE	1	
4	223	2402A13	FLYWHEEL ASSEMBLY (MANUAL)	1	0
4	223	2403A18	FLYWHEEL ASSEMBLY (ELECTR)	1	0
5	50	65211	RATCHET, FLYWHEEL (MANUA	1	
6	10	69088	SCREW, PLATE AND RATCHET	8	
7	10	32417	SCREW, FLEX PLATE TO FLYW	8	
8	17	26618	PIN, DOWEL - PULLEY TO FLYWI	1	
9		29788	FLANGE, FLYWHEEL PULLEY	1	
10		30306	PULLEY, FLYWHEEL	1	
11		29787	HUB, FLANGE - FLYWHEEL PUI	1	
12	398	2996	STATOR, ALTERNATOR - FLYWH	1	
13	10	57021	SCREW, STATOR TO UPPER EN	4	
14	54	26550	CLAMP, STATOR LEAD TO CRAN	1	
15	10	35519	SCREW, STATOR LEAD CLAMP F	1	
16		22789	"D" WASHER, STATOR LEAD CL	1	
17	54	46379	CLIP, STATOR LEAD TO CRANKC	1	