



FUEL PUMP ASSEMBLY

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		66777A 1	FUEL PUMP ASSEMBLY	1		
2	21	30430A 1	CHECK VALVE ASSEMBLY	1		
3		23014A 1	DIAPHRAGM KIT	1		4
4			GASKET, CHECK VALVE TO	2		4
5			GASKET, FUEL PUMP	2		4
6			GASKET, FUEL PUMP COVE	1		4
7		23004	RETAINER, CHECK VALVE	1		
8		68789	SCREW, RETAINER TO HOUSII	2		
9		64710	COVER, FUEL PUMP	1		
10	10	66944	SCREW, FUEL PUMP MOUNTING	2		
11	10	30173	SCREW, FUEL PUMP MOUNTIN	1		
12	12	20128	WASHER, FUEL PUMP SCREW	3		
13	12	66553	WASHER, FUEL PUMP SCREW	3		
14	23	65790	BUSHING, GUEL PUMP SCREW	2		
15	23	31915	SLEEVE, FUEL PUMP SCREW	1		
16	22	22949	CONNECTOR, PUMP OUTLET TC	1		
17	22	22946	SLEEVE, RUBBER - CONNECTOF	2		
18	22	22948	NUT, CONNECTOR TO FUEL LINI	2		
19	32	32094	FUEL LINE, PUMP TO LOWER AN	1		
20	22	22995	ELBOW FUEL PUMP INLET	1		
21	22	22947	SLEEVE, RUBBER	1		
22	22	22948	NUT, ELBOW	1		
23	32	30036	FUEL LINE, FUEL PUMP TO ADA	1		
24	22	37682	CONNECTOR, FUEL LINE TO AD	1		
25		22833	ADAPTOR, CHECK UNIT (FUEL LI	1		
26		23069	STEM, CHECK UNIT ADAPTOR	1		
27	25	20415	"O" RING, ADAPTOR STEM	1		4
28	24	23067	SPRING, ADAPTOR STEM	1		
29		30188	CUP WASHER, ADAPTOR	1		
30	10	69029	SCREW, ADAPTOR TO BOTTOM	2		
30	10	67916	SCREW, ADAPTOR TO BOTTOM	2		
31	11	46887	NUT, ADAPTOR SCREW	2		