



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1		
2	12	33001	WASHER, FLYWHEEL NUT	1		
3	28	20094	KEY, FLYWHEEL DRIVE	1		
4	223	2402A 6	FLYWHEEL ASSEMBLY (MANUAL	1	UNITED STATES 2858814 THRL	
4	223	2403A 9	FLYWHEEL ASSEMBLY (ELECTR	1	UNITED STATES 2858814 THRL	
4	223	2402A10	FLYWHEEL ASSEMBLY (MANUAL	1	UNITED STATES 3816308 AND I 0	
4	223	2403A15	FLYWHEEL ASSEMBLY (ELECTR	1	UNITED STATES 3816308 AND I 0	
5	50	39837	RATCHET, FLYWHEEL (MANUA	1	UNITED STATES 2858814 THRL	
6	10	32417	SCREW, PLATE AND RATCHET	8	UNITED STATES 2858814 THRL	
5	50	65211	RATCHET, FLYWHEEL (MANUA	1	UNITED STATES 3816308 AND I 0	
6	10	54630	SCREW, PLATE AND RATCHET	8	UNITED STATES 3816308 AND I	
7	10	32417	SCREW, FLEX PLATE TO FLYW	8		
8	17	26618	PIN, DOWEL - PULLEY TO FLY	1		
9		29788	FLANGE, FLYWHEEL PULLEY	1		
10		30306	PULLEY, FLYWHEEL	1		
11		29787	HUB, FLANGE - FLYWHEEL PUI	1		
12	398	2996	STATOR, ALTERNATOR - FLYW	1		
13	10	57021	SCREW, STATOR TO UPPER EN	4		
14	54	26550	CLAMP, STATOR LEAD TO CRAN	1		
15	10	35519	SCREW, STATOR LEAD CLAMP F	1		
16		22789	"D" WASHER, STATOR LEAD CL	1		
17	54	46379	CLIP, STATOR LEAD TO CRANK	1		