



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	333	3213A 3	SWITCH BOX ASSEMBLY, COMPI	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	4	UNITED STATES 2858814 THRL	
3	11	45076	NUT, SWITCH BOX TERMINAL	4		
4	10	58641	SCREW, SWITCH BOX TO FRON	4		
5		49184	RECTIFIER ELECTRIC	1		
6	13	26993	LOCKWASHER, RECTIFIER TO	1		
7	11	20922	NUT, RECTIFIER TO FRONT BF	1		
8	23	28458	SPACER, RECTIFIER TO FRONT	1		
9	10	20055	SCREW, RECTIFIER TERMINALS	3		
10	11	29488	NUT, RECTIFIER TERMINALS EL	3		
11	32	28373	SLEEVE, RECTIFIER TERMINALS	3		
12		59757	BRACKET, RETAINER - HIGH TE	1		
13	10	24933	SCREW, RETAINER BRACKET TI	1		
14	23	33070	SPACER, RETAINER BRACKET T	1		
15	11	46887	NUT, RETAINER BRACKET SCRE	1		
16	50	38890A 1	STARTER MOTOR ASSEMBLY -	1	UNITED STATES 2858814 THRL	
16	50	55601	STARTER MOTOR ASSEMBLY -	1	UNITED STATES 3091051 AND I	
17	10	52446	SCREW, STARTER MOTOR TO C	2		
18	13	26993	LOCKWASHER, STARTER MOTO	2		
19		25596	WIRE, STARTER MOTOR TO SOI	1		
20	10	29197	SCREW, GROUND WIRE TO STA	1		
21	13	26992	LOCKWASHER, GROUND WIRE	1		
22	11	20890	NUT, GROUND WIRE SCREW EL	1		
23		32445	STARTER SOLENOID - ELECTRI	1	UNITED STATES 2858814 THRL	
23		25661	STARTER SOLENOID - ELECTRI	1	UNITED STATES 9008819 AND I	
24	13	26996	LOCKWASHER, SOLENOID TERN	2		
25	11	20645	NUT, SOLENOID TERMINAL (#10	2		
26	13	26993	LOCKWASHER, SOLENOID TERN	2		
27	11	20083	NUT, SOLENOID TERMINAL - INE	1		
28	11	26062	NUT, CAP - SOLENOID TERMINA	1		
29	10	31208	SCREW, SOLENOID TO STARTEI	2	ELECTRIC UNITED STATES 285	
29	10	21625	SCREW, SOLENOID TO SUPPOR	2	ELECTRIC UNITED STATES 900	
30	11	46887	NUT, STARTER SOLENOID SCRE	2	ELECTRIC	
31		46715	GROUND STRAP ASSEMBLY ELE	1		
32		52770	WIRING HARNESS (INTERNAL) E	1		
33	24	28975	SPRING, GARTER - INTERNAL W	1		
34	54	52876	CLAMP, WIRING HARNESS ELEC	1		
35	10	45862	SCREW, WIRING HARNESS CLAI	2		
36	13	26996	LOCKWASHER, WIRING HARNE	2		
37	12	20128	WASHER, WIRING HARNESS CL	2		
38	54	26550	CLIP, WIRING HARNESS LEAD	1	ELECTRIC UNITED STATES 28	