



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	333	3213A 3	SWITCH BOX ASSEMBLY, COMPI	1	
2	11	45076	NUT, SWITCH BOX TERMINAL	4	
3	10	69030	SCREW, SWITCH BOX TO FRON	4	
4		49184	RECTIFIER ELECTRIC ELECTRIC	1	
5	13	26993	LOCKWASHER, RECTIFIER TO	1	
6	11	28770	NUT, RECTIFIER TO FRONT BF	1	
7	23	28458	SPACER, RECTIFIER TO FRONT	1	
8	10	20055	SCREW, RECTIFIER TERMINALS	3	
9	11	29488	NUT, RECTIFIER TERMINALS EL	3	
10	32	28373	SLEEVE, RECTIFIER TERMINALS	3	
11		59757	BRACKET, RETAINER - HIGH TE	1	
12	10	49987	SCREW, RETAINER BRACKET TI	1	
13	11	35045	NUT, RETAINER BRACKET SCRE	1	
14	50	55601	STARTER MOTOR ASSEMBLY EL	1	
15	10	52446	SCREW, STARTER MOTOR TO C	2	
16	13	26993	LOCKWASHER, STARTER MOTO	2	
17	84	71441	WIRE, STARTER MOTOR TO SOI	1	0
18	10	29197	SCREW, GROUND WIRE TO STA	1	
19	13	26992	LOCKWASHER, GROUND WIRE I	1	
20	11	20890	NUT, GROUND WIRE SCREW EL	1	
21	89	68258	STARTER SOLENOID ELECTRIC	1	0
22	13	26996	LOCKWASHER, SOLENOID TERK	2	
23	11	68219	NUT, SOLENOID TERMINAL (#10	2	
24	13	26993	LOCKWASHER, SOLENOID TERK	2	
25	11	26062	NUT, CAP - SOLENOID TERMINA	2	
26		46265	BOOT, TERMINAL - STARTER SC	1	
27	10	28635	SCREW, SOLENOID TO SUPPOR	2	
28	13	26992	WASHER, STARTER SOLENOID	2	
29	84	65773A 2	GROUND STRAP ASSEMBLY ELE	1	0
30	84	71443	WIRING HARNESS (INTERNAL) E	1	0
31	24	28975	SPRING, GARTER - INTERNAL w	1	
32	54	52876	CLAMP, WIRING HARNESS ELEC	1	
33	10	45862	SCREW, WIRING HARNESS CLAI	2	
34	13	26996	LOCKWASHER, WIRING HARNE	2	
35	12	20128	WASHER, WIRING H ARNESS CL	2	
36		61990	STA-STRAP, WIRING HARNESS I	1	
37	332	4895A 2	IGNITION COIL ASSEMBLY	1	0
38		72015	PAD, RUBBER - IGNITION COIL	1	0
39		63195	COVER, CASTING - COIL	1	
40	10	64099	SCREW, IGNITION COIL TO BRA	3	
41	12	26996	LOCKWASHER, IGNITION COIL S	2	