



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		816728	STARTER HOUSING	1		
2		816765	REST	1		
3		813607	SEAL	1		
4	10	821704	SCREW	2		
5	23	821702	SPACER	2		
6	23	816086	BUSHING	4		
7	25	815795	GROMMET	8		
8	12	69057	WASHER	8		
9	11	40119	NUT	4		
10		816748	INTERLOCK CABLE	1		
11	10	821428	SCREW	1		
12	12	73288	WASHER	1		
13	18	27769	COTTER PIN	1		
14	10	812832	SCREW	1		
15	11	821027	PUSH NUT (DESIGN I)	1		
15A	18	27769	COTTER PIN (DESIGN II)	1		
15B	12	35462	WASHER (DESIGN II)	1		
-		816728A	RECOIL STARTER (S/N 0G23916)	1		
-		816728A10	RECOIL STARTER (S/N 0G23916)	1		
16	24	826791	SPRING	1		
17		816690	INTERLOCK LEVER	1		
18		816712	CAM	1		
19		816711	RETAINER	1		
20	10	818249	SCREW	3		
21		90478	FELT PAD (DESIGN I)	1		
21A	13	826229	WASHER - SPRING (DESIGN II)	1		
22	24	86857	SPRING	1		
23	50	825269	STARTER SHEAVE	1		
24	24	86851	SPRING	2		
25		86850	CAM	2		
26	53	86849	RETAINING RING	2		
27	50	12066A	STARTER ROPE	1		
28		85174A	HANDLE ASSEMBLY	1		
29	24	86852	SPRING	1		
30		86853	CAM	1		
31	10	826253	SCREW	1		
32		42690	BUSHING	1		
33	53	818853	RETAINING RING	1		