



19252

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2142	6228A 1	COWL (STARBOARD BLACK)	1		1
1	2142	6228A 3	COWL (STARBOARD GRAY)	1		1
2	26	60297	SEAL, FUEL CONNECTOR -COV	1		
3	2141	6227A 1	COWL (PORT BLACK)	1		1
3	2141	6227A17	COWL (PORT GRAY)	1		1
4	26	60298	SEAL, CONTROL CABLES-COW	1		
5		89717T	BRACKET, COWL SEALING-REAF	1		
6		69876 1	SEAL, REAR BRACKET	2		
7		90980	BRACKET, COWL HINGE	2		
8	10	45561	SCREW, (.250-20 x 1.12), HINGE	2		
8	10	75794	SCREW, HINGE BRACKET-UPPE	2		
9		75805	CAP, HINGE BRACKET SCREW (L	2		
10	13	26992	LOCKWASHER, (.250), HINGE BR	4		
11	12	37998	WASHER, HINGE BRACKET SCR	4		
12	12	75806	WASHER, HINGE BRACKET SCR	2		
13		90979	PIN, COWL HINGE	4		
14	10	28782	SCREW, (.312-18 x .880), PIN TO	4		
15	13	26993	LOCKWASHER, (.312), PIN ATTA	4		
16		46785A 5	COWL LATCH ASSEMBLY	2		
17		62628	BARREL, COWL LATCH	2		
18	10	31312	SCREW, (#10-32 x 0.875), LATCH	2		
19		15222	BAR, ADJUSTMENT-COWL LATCH	2		
20		62629	BARREL, COWL LATCH	2		
21	24	62624	SPRING, TENSION-COWL LATCH	2		
22	12	30164	WASHER, (.192 x .375 x .0312), AI	2		
23	11	45812	NUT, (#10-32), ADJUSTMENT BA	2		
24	2143	8774A 6	FRONT COVER (BLACK)	1		1
24	2143	8774A 7	FRONT COVER (GRAY)	1		1
25		79551 1	BLANKET, SOUND ABSORBING	1		
26		14333	KNOB	1		
27	12	30771	WASHER	2		
28	12	75246	WASHER	2		
29	24	30772	SPRING	1		
30	17	29077	ROLL PIN	1		
31		47341A 1	EMERGENCY STARTER ROPE (F	1		