



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		62351A 1	RECTIFIER	1	
2	10	20646	SCREW, RECTIFIER TO PLATE	2	
3	13	26396	LOCKWASHER, RECTIFIER SCRE	2	
4	23	94304	SPACER, RECTIFIER SCREW	2	
5	11	45076	NUT, RECTIFIER TERMINAL	3	
6	89	96054	STARTER SOLENOID	1	
7	13	26395	LOCKWASHER, SOLENOID TER	2	
8	11	26419	NUT, SOLENOID TERMINAL (#8-	2	
9	13	26392	LOCKWASHER, SOLENOID TER	2	
10	11	94330	NUT, SOLENOID TERMINAL (1/2-	2	
11	85	97861	INSULATOR, STARTER SOLENO	1	
12	10	69054	SCREW, SOLENOID TO ATTENU	2	
13	13	26392	LOCKWASHER, SOLENOID SCRE	2	
14	50	65436	STARTER MOTOR (STAMPED 50-	1	
14	50	44369A 1	STARTER MOTOR STAMPED 50-	1	
15		44368	ADAPTOR, STARTER MOTOR S	1	
16		57247	STOP, RUBBER - STARTER MOT	2	
17	84	93388A 1	CABLE, STARTER TO SOUND AT	1	
18	10	69035	SCREW, CABLE TO STARTER MO	1	
19	84	93389A 6	CABLE	1	SOLENOID TO STARTER MOTO
20	13	26392	LOCKWASHER, STARTER MOTO	1	
21	11	20890	NUT, STARTER MOTOR TERMIN	1	
22		56703	COLLAR, RUBBER - STARTER MI	2	
23	23	56774	SPACER, COLLAR TO MOUNTING	AP	4
24	84	96271A 2	WIRING HARNESS (INTERNAL)	1	
25	84	95084A 2	WIRE ASSEMBLY, FUSE	1	
26	88	79091	FUSE	1	
27		88751	CLAMP, WIRING HARNESS	1	
28	10	23702	SCREW, WIRING HARNESS CLAI	1	
29	12	72761	WASHER, WIRING HARNESS CL	1	
30	24	28357	SPRING, WIRING HARNESS	1	
31	84	88439A 7	BATTERY CABLE (POSITIVE)	1	
31	84	88439A 4	BATTERY CABLE (NEGATIVE)	1	
32		88683	BRACKET, WIRING HARNESS SL	1	
33	10	23015	SCREW, BRACKET ATTACHING	2	
34	12	30164	WASHER, BRACKET SCREW	2	
35		88682	COVER, HARNESS SUPPORT BR	1	
36	10	25158	SCREW, COVER TO BRACKET (1	2	
37	26	60925	SEAL, WIRING HARNESS BRACK	1	
38	54	28700	CLAMP, WIRING HARNESS	1	
39	10	72285	SCREW, WIRING HARNESS CLAI	1	