



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	462	8839A 2	CRANKSHAFT ASSEMBLY	1		
2	30	64424	BEARING, BALL - LOWER AND	2		
3	15	22369A 1	SHIM, LOWER BEARING TO CRA	AR		4
4	542	7509A 3	MAIN BEARING ASSEMBLY (VAL)	2		
5	17	20032	DOWEL PIN, MAIN BEARING	4		
6	17	60282	DOWEL PIN, (STEPPED)	2		
7	17	65855	DOWEL PIN, REED STOP	16		
8	34	66051A 1	REED SET, MATCHED - MAIN B	2		
9	34	65946	REED STOP	8		
10	10	77280	SCREW, REED STOP MOUNTIN	8		
11	11	20110	NUT, REED STOP MOUNTING	8		
12	10	45775	SCREW, MAIN BEARING CLAM	4		
13	11	45774	NUT, MAIN BEARING SCREW C	4		
14		26113	RACE, OUTER (PAIR)	2		
15	53	26933	RING, SNAP - OUTER RACE C	2		
16	29	71422	BEARING, NEEDLE	112		
17	774	8600A 3	PISTON/PISTON PIN (STD.) 50	6		
17	774	9095A 1	PISTON/PISTON PIN (.015 O.S.)	AR		4
17	774	9096A 1	PISTON/PISTON PIN (.030 O.S.)	AR		4
17	776	8896A 3	PISTON/PISTON PIN (STD.) 60	3		
17	776	8897A 2	PISTON/PISTON PIN (.015 O.S.)	AR		4
17	776	8898A 2	PISTON/PISTON PIN (.030 O.S.)	AR		4
18	40	52035	LOCK RING, PISTON PIN	6		
19	39	78816A12	RING, PISTON (STANDARD)	1		
19	39	78811A12	RING, PISTON (.015 O.S.)	AR		4
19	39	88392A12	RING, PISTON (.030 O.S.)	AR		4
20	624	8101A 3	CONNECTING ROD AND CAP AS:	3		
21	10	91012	SCREW, CAP TO CONNECTING	6		
22	31	62596A 1	BEARING ASSEMBLY	3		
23	29	47270	BEARING, NEEDLE - PISTON PI	87		
24	12	47247	WASHER, NEEDLE LOCATING	6		