



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	187	1807	BOTTOM COWL	1,1,1,,		
1	187	1952	BOTTOM COWL	1,1,1,,	SERIAL J1489408-09999999	
2	37	31035	DECAL, SHIFT - CHOKE - STOP - I	1,1,1,,		
2	37	35512	DECAL, SHIFT - CHOKE - STOP - I	1,1,1,,		
2A	37	35824	DECAL, SHIFT - BOTTOM COWL	1,1,1,,		
3		29082A 1	CLAMPING LEVER ASSEMBLY, P	1,1,1,1,		
4		29083A 1	CLAMPING LEVER ASSEMBLY, S	1,1,1,1,		
5	53	30428	FASTENER, CLAMPING LEVER	2,2,2,2,		
6	17	29077	PIN, ROLL - CLAMPING LEVER	2,2,2,2,		
7	23	26819	BUSHING, NYLON - CLAMPING LI	2,2,2,2,		
8	23	31293	BUSHING, RUBBER - CLAMPING	2,2,2,2,		
9	27	30803	GASKET, POWERHEAD TO BOT1	1,1,1,,		
9	27	31557	GASKET, POWERHEAD TO BOT1	1,1,1,,	SERIAL J1489408-09999999	
10	27	30801	GASKET, EXHAUST RELIEF COVI	1,1,1,1,		
11		30800	COVER, EXHAUST RELIEF	1,1,1,1,		
12	10	31206	SCREW, EXHAUST RELIEF COVE	7,7,7,7,		
13	37	37754	DECAL, BOTTOM COWL - PORT	1,1,1,1,	PART OF A-37-37746A1 DECAL S	
14	37	37755	DECAL, BOTTOM COWL - STARB	1,1,1,1,	PART OF A-37-37746A1 DECAL S	
--		30852A 1	STOP SWITCH ASSEMBLY	1,1,1,1,		
--		32372A 1	STOP SWITCH ASSEMBLY	1,1,1,1,		
15		30853	HARNESS, STOP SWITCH	1,1,1,1,		
15		32372	HARNESS, STOP SWITCH	1,1,1,1,		
16	12	30856	WASHER, SEALING - STOP Sw	1,1,1,1,		
17		30859	INSULATOR, SLEEVE - INNER S	1,1,1,1,		
18	24	30858A 1	SPRING AND CONTACT ASSEM	1,1,1,1,		
19		30854	COVER, STOP SWITCH	1,1,1,1,		
20	13	21972	LOCKWASHER, STOP SWITCH C	1,1,1,1,		
21	11	21971	NUT, STOP SWITCH CONNECT	1,1,1,1,		
22	10	28634	SCREW, BOTTOM COWL FLUSHI	1,1,1,1,	SERIAL J1489408-09999999	
23	12	20260	WASHER, BOTTOM COWL FLUSHI	1,1,1,1,	SERIAL J1489408-09999999	