



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		33852A 1	FUEL PUMP ASSEMBLY	1,1,1		
2	21	22974A 2	CHECK VALVE ASSEMBLY	2,2,2		
3	10	24233	SCREW, FUEL PUMP TO CYLIND	4,4,4		
4	12	26014	WASHER, FUEL PUMP FASTENIN	4,4,4		
5	32	30850	FUEL LINE, FUEL PUMP TO CAR	1,1,		
5	32	32230	FUEL LINE, FUEL PUMP TO CAR	,,1		
6		31503	DIAPHRAGM, FUEL PUMP TO GA	1,1,1		
7	27	30651	GASKET, FUEL PUMP TO SPACE	1,1,1		
8		30659	SPACER, FUEL PUMP TO CYLINC	1,1,		
8		31510	SPACER, FUEL PUMP TO CYLINC	,,1		
9	27	31509	GASEKT, FUEL PUMP SPACER T	1,1,1		
10	32	32617	FUEL LINE, FUEL PUMP TO ADA	1,1,1		
--		30748	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1		
--	10	29283	SCREW, ADAPTOR TO BOTTOM	2,2,2		
11		32454	ADAPTOR, CHECK UNIT (FUEL LI	,,1		
12	10	32455	SCREW, ADAPTOR TO BOTTOM	,,2		
13	24	28357	SPRING, ADAPTOR FASTENING	,,2		
14	11	20110	NUT, ADAPTOR FASTENING SCF	,,2		