



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1A		33852A 1	FUEL PUMP ASSEMBLY	1,1,1		
2A	21	22974A 2	CHECK VALVE ASSEMBLY	2,2,2		
3A		31503	DIAPHRAGM, FUEL PUMP TO GA	1,1,1		
4A	27	30651	GASKET, FUEL PUMP DIAPHRAG	1,1,1		
5A		34571	SPACER, FUEL PUMP	1,1,1		
6A	10	23702	SCREW, SPACER TO FUEL PUMP	4,4,4		
7A	11	20645	NUT, SPACER TO FUEL PUMP SI	4,4,4		
8A	22	34577	ELBOW (90), FUEL PUMP TO CAF	1,1,1		
9A	22	34579	ELBOW (45), SPACER TO PRESS	2,2,2		
10A	32	34578	HOSE, PRESSURE-CYLINDER BL	1,1,1		
11A	54	20387	CLAMP, PRESSURE HOSE TO 45	2,2,2		
12A	32	34572	FUEL LINE, FUEL PUMP TO ADAF	1,1,1		
11		32454	ADAPTOR, CHECK UNIT (FUEL LI	1,1,1		
12	10	32455	SCREW, ADAPTOR TO BOTTOM	2,2,2		
13	24	28357	SPRING, ADAPTOR TO BOTTOM	2,2,2		
14	11	20110	NUT, ADAPTOR TO BOTTOM CO	2,2,2		