



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	11	20696	NUT, FLYWHEEL	1,1			
2	12	36282	WASHER, FLYWHEEL NUT	1,1			
3	25	36284	"O" RING, FLYWHEEL HUB	1,1		4	
4	28	20094	KEY, FLYWHEEL DRIVE	2,2			
5	8	2246A 4	FLYWHEEL ASSEMBLY, COMPLE	1,1			
6	23	34367	COLLAR, FLYWHEEL DUST SH	1,1			
7	13	22027	WASHER, WAVE _ MAGNETO CA	1,1			
8	398	2574A 4	STATOR PLATE ASSEMBLY, CON	1,1			
9		39326A 1	SHIELD ASSEMBLY, STATOR F	1,1			
10	10	45742	SCREW, SHIELD TO STATOR	2,2			
11	13	26396	LOCKWASHER, SHIELD SCRE	2,2			
12		33904	RING, HOLD DOWN - STATOR	1,1			
13	10	35400	SCREW, HOLD DOWN RING TO	4,4			
14	398	2230	CAM, BREAKER	1,1			
15	15	33910015	SHIM, STATOR PLATE TO UPPE	1,1			
16	54	39844	CLAMP, STATOR LEAD	1,1			
17	10	20720	SCREW, STATOR LEAD CLIP TO	1,1			
18		22789	"D" WASHER, LEAD CLIP SCREW	1,1			
19		34363A 1	THROTTLE CAM BRACKET ASSE	1,1			
20	10	35450	SCREW, CAM BRACKET TO STA	2,2			
21	54	34449	CLIP, THROTTLE CAM BRACKET	1,1			
22		36000	CAM, THROTTLE	1,1			
23	10	35450	SCREW, THROTTLE CAM TO CAI	2,2			
24	10	34696	SCREW, CONTROL LEVER TO C	1,1			
25	13	29720	WASHER, WAVE _ CONTROL LE	1,1			
26	12	34392	WASHER, CONTROL LEVER SCF	2,2			
27	11	28656	NUT, CONTROL LEVER SCREW	1,1			